



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		42815A 6	BELL HOUSING ASSEMBLY (BLA)	1		
2	27	94996Q 2	GASKET, BELL HOUSING	1	(Gear Repair Kits No. 1 - 5)	11,12,14
3	22	33066	CONNECTOR, (5/8" HOSE - 1/2	1		
3	22	44221	CONNECTOR, (5/8" HOSE - 3/4	1		
3	22	42683	CONNECTOR, (3/4" HOSE)	1		
5	23	806036A 1	BUSHING, BELLHOUSING (5/8"	1		15
6	26	816464 1	OIL SEAL, BELL HOUSING	1		15
7	23	806036A 1	BUSHING, BELL HOUSING (5/1	1		15
8	27	35982	GASKET, RUBBER - BELL HOU:	1	(Gear Repair Kits No. 1 - 5)	11,12,15
9	25	33504	"O" RING, BELL HOUSING	1	(Gear Repair Kits No. 1 - 5)	11,12,15
10	12	72498	WASHER, SYNTHANE - BELL H	2		
11	16	59579	STUD, BELL HOUSING TO DRIV	6		
12	12	35935	WASHER, BELL HOUSING STUD	6		
13	11	859116	NUT, BELL HOUSING STUD	6		
14		60932A 4	BELLOWS ASSEMBLY, UNIVERS.	1		12
15	54	86049	GROUNDING CLIP, BELLOWS	4		12
16	54	815504372	CLAMP, UNIVERSAL JOINT BELL	2		12
17	32	32461	HOSE, WATER - 5/8" I.D.	1		12
17	32	41725 33	HOSE, WATER - 3/4" I.D.	1		12
18	54	815504412	CLAMP, WATER HOSE	2		12
19		18654A 1	BELLOWS, EXHAUST	1		12
19		78458A 1	EXHAUST TUBE (454 MAGNUM)	1		
20	54	815504348	CLAMP, EXHAUST BELLOWS	2		12
21		45589A 3	SHAFT ASSEMBLY, SHIFT - UPPE	1		
22		62104 1	SHIFT SHAFT - INTERMEDIATE	1		
23	18	32665	COTTER PIN, INTERMEDIATE SF	1		
24	12	32666	WASHER, INTERMEDIATE SHIFT	1		
25		45518A 3	LEVER ASSEMBLY, UPPER SHIF	1		15
26	12	39116	WASHER, UPPER SHIFT LEVER	1		15
27	10	45590	SCREW, UPPER SHIFT LEVER (1	1		15
-		19543T 1	SHIFT CABLE KIT	1		
-	30	803097T 1	TRANSOM SEAL KIT (w / Exh. Be	1		
-	30	803098T 1	TRANSOM SEAL KIT (w/ Exh. Tut	1		
-	43	803101T 1	GEAR REPAIR KIT NO. 1	1	(1.98 Ratio)(20/24 Gear)	
-	43	803112T 1	GEAR REPAIR KIT NO. 2	1	(1.65 Ratio)(24/24 Gear)	
-	43	803114T 1	GEAR REPAIR KIT NO. 3	1	(1.84 Ratio)(17/19 Gear)	
-	43	803115T 1	GEAR REPAIR KIT NO. 4	1	(1.32 Ratio)(16/20 Gear)	
-	43	803116T 1	GEAR REPAIR KIT NO. 5	1	(1.50 Ratio)(20/22 Gear)	