



| Parts List | | | | | | |
|------------|-------|-----------|-----------------------------|-----|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | | 93732A 6 | AUTO TRIM ASSEMBLY | 1 | | |
| 2 | 11 | 45076 | NUT, AUTO TRIM TERMINAL | 8 | | |
| 3 | 10 | 69067 | SCREW, BLACK WIRE TO AUTO | 1 | | |
| 4 | 84 | 86322A22 | WIRE ASSEMBLY (BLACK) | 1 | | |
| 5 | 13 | 78968 | LOCKWASHER, WIRE SCREW | 1 | | |
| 6 | 11 | 64015 | NUT, WIRE SCREW | 1 | | |
| 7 | 10 | 76502 | SCREW, AUTO TRIM TO BRACKE | 3 | | |
| 8 | 23 | 42574 | BUSHING, AUTO TRIM SCREW | 6 | | |
| 9 | 11 | 20190 | NUT, AUTO TRIM SCREW | 3 | | |
| 10 | | 805320A 2 | TRIM SENDER ASSEMBLY | 1 | | |
| 11 | 85 | 63990 | INSULATOR, TRIM SENDER | 1 | | |
| 12 | | 79146 | RETAINER | 2 | | |
| 13 | 79 | 99535A 2 | GAUGE ASSEMBLY, AUTO TRIM | 1 | | |
| 14 | 88 | 72729 | BULB | 1 | | |
| 15 | 88 | 79888 | SOCKET, BULB | 1 | | |
| 16 | 12 | 26427 | WASHER, GAUGE TERMINAL | 2 | | |
| 17 | 11 | 26419 | NUT, GAUGE TERMINAL | 5 | | |
| 18 | | 79480 | BRACKET | 2 | | |
| 19 | 84 | 86322A 3 | WIRE ASSEMBLY (BLACK) | 1 | | |
| 19 | 84 | 86323A 2 | WIRE ASSEMBLY (PURPLE) | 1 | | |
| 20 | 84 | 88456A 3 | HARNES ASSEMBLY, AUTO TR | 1 | | |
| 21 | | 85218A 3 | PLATE ASSEMBLY, SWITCH MOL | 1 | | |
| 22 | | 76424 | BRACKET, SWITCH MOUNTING | 1 | | |
| 23 | | 49440 | LOCKNUT, AUTO TRIM SWITCH | 1 | | |
| 24 | 16 | 55422 | STUD, PLATE MOUNTING | 2 | | |
| 25 | 12 | 24676 | WASHER, PLATE STUD | 2 | | |
| 26 | 11 | 68219 | NUT, PLATE STUD | 2 | | |
| 27 | 54 | 95814 | CLAMP, WIRING HARNESS CONI | 1 | | |
| 28 | 10 | 29227 | SCREW, WIRING HARNESS CLAI | 1 | | |
| 29 | 11 | 34388 | NUT, CLAMP SCREW | 1 | | |
| 30 | 84 | 95084A 9 | WIRE ASSEMBLY, FUSE (LONG-F | 1 | | |
| 31 | 88 | 79091 | FUSE (20 AMP.) | 1 | | |
| 32 | 84 | 95084A10 | WIRE ASSEMBLY, FUSE (SHORT | 1 | | |
| 33 | 84 | 88974A 1 | WIRE ASSEMBLY (BLACK) | 1 | | |
| 34 | 84 | 86322A 6 | WIRE ASSEMBLY (BLACK) | 1 | | |