



18786

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1664	9295A 5	GEAR HOUSING ASSEMBLY	1	(BASIC)	
2	16	57986 1	STUD (2.810)	1		
3	10	79953	SCREW, (.375-16 x .250), Vent	1		
4	12	19183	WASHER, Fiber	1		
5	26	19473	SEAL, Oil	3		1
6	31	39832	BEARING, Roller	1		1
7		53061	ANCHOR, Stud	1		
8	16	53064 1	STUD (7.280)	1		
9	12	39821	WASHER	1		
10	53	35128	RING, Retaining	1		
11		39803	COVER	1		
12		11353	NOSE CONE	1		
13	17	30282	PIN	1		
14		98036	CAP, Nose Cone	1		
15		65700	PLUG	1		1
16	11	22339	NUT, (.625-18)	1		
17	25	39828	O-RING	1		1
18	11	53060	NUT	1		
19	11	39825	NUT (1.250-12)	1		1
20	12	42262	WASHER	1		1
21	31	39772A 1	BEARING, Roller	1		
22	31	39770A 1	BEARING, Roller	1		
23	15	39809A 1	SHIM SET	AR		
24	12	39818	WASHER	1		
25	44	85187	PROPELLER SHAFT (1.370 OD)	1		
26	44	12049	PROPELLER SHAFT (1.750 OD)	1		
27	12	39820	WASHER	1		1
28	12	39817	WASHER	1		1
29	11	39907	NUT (1.00-14)	1		1
30		11393 1	WEAR PAD	2		
31	10	11601	SCREW, (.312-18 x .750)	4		
32	11	47302	NUT, (.562-18)	1		1
33	17	20033	PIN, Dowel, Locating	2		
34	25	12000 1	O-RING	1		1
35	25	36390	O-RING	6		1
36	10	87370 2	SCREW, (.500-13 X 3.00)	2		
37	43	16768A 1	GEAR SET (Pinion and Drive)	1	(LH - 1.00:1 RATIO)	
37	43	78095A 1	GEAR SET (Pinion and Drive)	1	(LH - 1.125:1 RATIO)	
38	23	53070	SPACER	1	(LH GEAR SET)	
38	23	53070	SPACER	1	(RH GEAR SET)	
39	23	53067	SPACER	2	(RH GEAR SET)	
40	23	53068	SPACER	1	(RH GEAR SET)	