

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1571	4847A 5	DRIVE SHAFT HOUSING ASSEM	1		
2	10	21934	SCREW, SET - DRIVE SHAFT H	1		
3	26	62818	OIL SEAL, DRIVE SHAFT HOUS	1		
4	25	62817	"O" RING, DRIVE SHAFT HOUSI	1		
5	27	54014A 1	GASKET, DRIVE SHAFT HOUSI	1		
6	16	54674	STUD, DRIVE SHAFT HOUSING	6		
7	11	34933	NUT, DRIVE SHAFT HOUSING S	6		
8	19	47579	PLUG, TRIM TAB HOLE	1		
9	10	79953	SCERW, VENT	1		
10	12	20260	WASHER, SEALING	1		
11	24	48442	SPRING, TENSION	1		
12	20	48219	CHECK VALVE	1		
13	25	48452	QUAD RING	1		
14	27	66925	GASKET	1		
15		54168	GUIDE	1		
16	10	22523	SCREW	3		
17	31	38356A 1	TAPERED ROLLER BEARING AS:	1		
18	12	62795	TAB WASHER, DRIVE SHAFT	1		
19	13	62788	LOCKWASHER, DRIVE SHAFT	1		
20	11	41527T	NUT, DRIVE SHAFT	1		
21		62787A 2	COUPLING ASSEMBLY, OIL SLIN	1	INCLUDED WITH GEAR HOUSIN	
22	15	39899A 1	SHIM ASS'Y, ROLLER BEARING	AR	INCLUDED WITH GEAR HOUSIN	22
23	12	62797	WASHER, ROLLER BEARING TO	1	INCLUDED WITH GEAR HOUSIN	
24	15	32061A 1	SHIM ASSEMBLY, TAPERED ROL	AR		22
25	31	62799A 1	TAPERED ROLLER BEARING AS:	1		
26	43	62879T	DRIVEN GEAR, DRIVE SHAFT (32	1	(SEE NOTE #1)	
27	45	62793T	DRIVE SHAFT	1		
28	25	67202	"O" RING, TOP COVER	1		
29		62911T	COVER, TOP	1		
30	10	35047	SCREW, COVER (1-1/4")	4		
31		62782A 8	UNIVERSAL JOINT (MERCURY M	1		
31		62782A 4	UNIVERSAL JOINT (BORG WARN	1		
32		62782A 6	YOKE, UNIVERSAL JOINT (GEA	1		
33		75832A 2	CROSS AND BEARING ASSEME	2		
34		39383T	SOCKET, CENTER - UNIVERSA	1		
35		62784A 1	YOKE, UNIV. JOINT (COUPLING	1	MERUCRY MARINE TRANSMISSE	
36	24	62727	SPRING, UNIVERSAL JOINT	1	MERUCRY MARINE TRANSMISSE	
35		57749A 1	YOKE, UNIVERSAL (COUPLING	1	BORG WARNER TRANSMISSIOI	
36A	25	25439	"O" RING, UNIVERSAL	2	BORG WARNER TRANSMISSIOI	
37	15	62833A 1	SHIM ASSEMBLY, ROLLER BEAR	AR		
38	31	38356A 1	TAPERED ROLLER BRG ASSEME	1		

