



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		88183A	5 HYDRAULIC PUMP ASSEMBLY	1		
2		90426T	BRACKET, MOUNTING - STARTE	1		
3		90285	SCREW, MOUNTING BRACKET (E	1		
4		56720	WASHER, MOUNTING BRACEKT	1		
5		29488	NUT, MOUNTING BRACKET TO F	2		
6		79138A	9 BATTERY CABLE, BLACK (NEGATP	1		
7		79149	CIRCUIT BREAKER (20 AMP.)	1		
8		69014	SCREW, CIRCUIT BREAKER	1		
9		45076	NUT, CIRCUIT BREAKER TERMIN	2		
10		87379A	5 WIRE, SOLENOID TO SOLENOID	1		
12		79147A	3 HARNESS ASSEMBLY, HYDRAUL	1		
13		79091	FUSE (20 AMP.)	1		
14		95084A	2 WIRE, FUSE	1		
15		88075	RETAINER, HARNESS TO MOUN	1		
16		96158	SOLENOID, TRIM PUMP	2		
17		41508	SCREW, STARTER SOLENOID TI	4		
18		26995	LOCKWASHER, STARTER SOLEI	4		
19		26419	NUT, STARTER SOLENOID TERM	4		
20		26992	LOCKWASHER, STARTER SOLEI	4		
21		94330	NUT, STARTER SOLENOID TERM	4		
22		96535	BOOT, RUBBER - STARTER SOLI	1		
23		32024	SCREW, SOLENOID INSULATOR	1		
24		94275	CONNECTOR, SOLENOID TO SOI	1		
25		86322A	15 WIRE, SOLENOID TO SOLENOID	1		
26		79139A	12 BATTERY CABLE, RED (POSITIV	1		
27		79023A	10 FUSE (110 AMP.)	1		
28		96457	WASHER, FUSE TERMINAL	1		
29		21825	NUT, FUSE TERMINAL	1		
30		89029	ADAPTOR, HYDRAULIC PUMP	1		
31		88893A	4 BRACKET ASS'Y, MOUNTING - H	1		
32		58491	BUMPER, RUBBER - PUMP MO	2		
33		59784	SCREW, PUMP MOUNTING BR	6		
34		29245	WASHER, PUMP MOUNTING B	6		
35		90271	SCREW, HYDRAULIC PUMP TC	2		
36		58643	LOCKWASHER, HYDRAULIC PL	2		
37		88183A	12 COMPLETE HYDRAULIC PUMP (I			