



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		88475A	5 HYD PUMP ASSY (PLASTIC RESI	1		11,12
1		93247A	4 HYD PUMP ASSY (PLASTIC RESI	1		11,12
1		79271A	4 HYD PUMP ASSY (METAL RESEI	1		
1	25	48171	"O" RING, HYDRAULIC PUMP	4		
3	10	46918	SCREW, VENT - HYDRAULIC PI	1		
5	10	79953	SCREW, FILTER	1		
6	12	20260	WASHER, SEALING - FILTER SI	1		
7		48077A	3 CONTROL VALVE ASSEMBLY	1	NOT USED WITH 93247A4 HYDI	
--	25	48171	"O" RING, PUMP TO VALVE (SA	4	NOT USED WITH 93247A4 HYDI	
8	22	52666	ELBOW, CONTROL VALVE	1	NOT USED WITH 93247A4 HYDI	
9	10	21091	SCREW, CONTROL VALVE (1-1/8	4	NOT USED WITH 93247A4 HYDI	
10	13	26992	LOCKWASHER, CONTROL VALVE	4	NOT USED WITH 93247A4 HYDI	
11	84	74023A	1 CONNECTOR AND HARNESS (UC	1		
11	84	79147A	3 CONNECTOR AND HARNESS (UC	1		
12		88893A	4 BRACKET ASSEMBLY, MOUNTIN	1		
13		58491	BUMPER, RUBBER	2		
14	10	59784	SCREW, PUMP MOUNTING BR	6		
15	12	29245	WASHER, PUMP MOUNTING B	6		
16	10	35386	SCREW, HYDRAULIC PUMP (1"	4		
17	13	39107	LOCKWASHER, HYDRAULIC PL	4		
18	11	21908	NUT, HYDRAULIC PUMP SCRE	4		
19	89	68258A	4 TRIM MOTOR SOLENOID	2		
20	13	26996	LOCKWASHER, STARTER SOLEI	4		
21	11	68219	NUT, STARTER SOLENOID TER	4		
22	13	26993	LOCKWASHER, STARTER SOLEI	4		
23	11	68292	NUT, STARTER SOLENOID TER	4		
24		46265	BOOT, RUBBER - STARTER SOLI	3		
25		26551	BRACKET, STARTER SOLENOID	1		
26	10	62568	SCREW, HYDRAULIC PUMP LEA	1		
27		74407T	BRACKET, MOUNTING - STARTE	1		
28	10	48063	SCREW, MOUNTING BRACKET TO	2		
29	13	26992	LOCKWASHER, MOUNTING BRA	2		
30	11	24656	NUT, MOUNTING BRACKET TO P	1		
31		74406	BRACKET STARTER SOLENOID I	1		
32		26901	BUMPER, HYDRAULIC PUMP TO	1		
33	10	34290	SCREW, STARTER SOLENOID TI	2		
33	10	69028	SCREW, STARTER SOLENOID TI	2		
34	13	26992	LOCKWASHER, STARTER SOLEI	4		
35	11	21825	NUT, STARTER SOLENOID SCRE	4		