


FOR CONTINUITY
 CIRCUIT COMPONENTS
 SEE PAGE 3

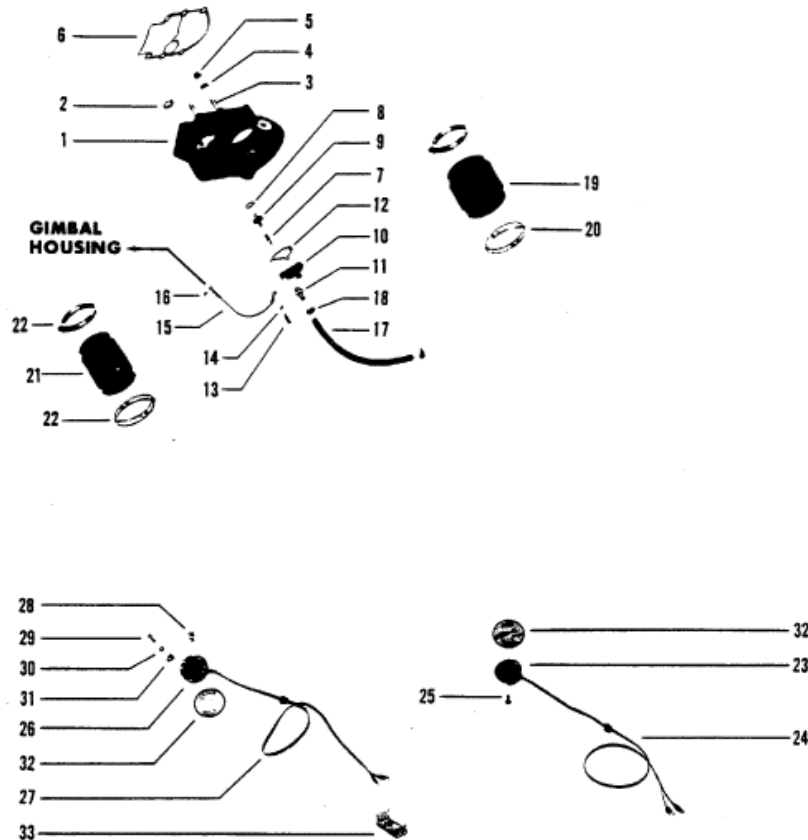

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62814A 3	BELL HOUSING ASSEMBLY	1		
2	26	48443	OIL SEAL, BELL HOUSING	1		
3	16	54011	STUD, BELL HOUSING (3-1/4")	6		
4	12	54012	WASHER, BELL HOUSING STUD	6		
5	11	35000	NUT, BELL HOUSING STUD	6		
6	27	54014A 1	GASKET, BELL HOUSING	1		
7	24	48442	SPRING, TENSION - OIL RELEASE	1		
8	25	48452	QUAD RING, OIL RELEASE CHEC	1		
9	20	48219	CHECK VALVE, OIL RELEASE	1		
10		54170A 1	COVER ASSEMBLY, CHECK VALV	1		
11	22	34982	CONNECTOR, CHECK VALVE G	1		
12	27	54021	GASKET, CHECK VALVE GUIDE C	1		
13	10	36137	SCREW, CHECK VALVE GUIDE C	3		
14	13	26992	LOCKWASHER, CHECK VALVE G	3		
15		57292	JUMPER CABLE, GIMBAL HOUSIN	1		
16	10	47225	SCERW, JUMPER CABLE	1		
17	32	34423	HOSE, OIL - BELL HOUSING TO E	1		
18	54	54428	CLAMP, HOSE	2		
19		60932A 4	BELLOW'S ASSEMBLY, UNIVERS.	1		
-	54	86049	CLIP, GROUNDING	2		
20	54	31765	CLAMP, BELLOW'S	2		
21		78632A 1	TUBE, EXHAUST	1		
22	54	38889	CLAMP, EXHAUST BELLOW'S	2		
23		96863A10	SWITCH ASSEMBLY, TRIM LIMIT	1		
24	84	63405	HARNESS, TRIM LIMIT SWITCH I	1		
25	10	63400	SCEW, HARNESS ATTACHING (S	2		
26		64947	SENDER, DUMMY (STARBOARD	1		
27	84	64987	HARNESS, DUMMY SENDER (ST	1		
28	19	96069	PLUG, HARNESS ATTACHING (S	2		
29	10	37978	SCREW, TRIM SENDER AND SW	4		
30	13	26996	LOCKWASHER, TRIM SENDER A	4		
31		57008	RETAINER, TRIM SENDER AND	4		
32	85	63990	INSULATOR, SWITCH AND SENC	2		
33		79146	RETAINER, CONNECTOR - TRIM	1		
-		96863A11	SINGLE STATION SENDER KIT (C	1		
-		805130A 8	DUAL STATION SENDER KIT (OF	1		
-		42385A7	GIMBAL RING KIT	-		