



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
--		88183A 5	HYDRAULIC PUMP ASSEMBLY	1		
1		41217	ADAPTER	1		
2		89493	COUPLING	1		
3		89494	MANUAL RELEASE (INCLUDE	AR		
3		96598	MANUAL RELEASE (INCLUDE	AR		
4		41216	PUMP (INCLUDES SCREWS)	1		
5	35	89496	FILTER	2		
6	25	89498	"O" RING, MOTOR END	1		
7	25	89497	"O" RING, RESERVOIR END	1		
8		41218	DIPSTICK	1		
9		41219	RESERVOIR	1		
10	10	41220	SCREW, RESERVOIR (INCLUDE	1		
11	16	41222	THRU STUD (SHORT)	1		
11	16	41221	THRU STUD (LONG)	1		
--		93692	MOTOR, HYDRAULIC PUMP	1		
12		89484	END FRAME, DRIVE END	1		
13		41214	ARMATURE	1		
14	12	89482	WASHER, THRUST - ARMATI	1		
15		41215	FIELD FRAME	1		
16		89487	BRUSH CARD	1		
17		89448	END FRAME, COMMUTATOR	1		
18	10	41212	THRU BOLT, MOTOR (SHOR	1		
18	10	41213	THRU BOLT, MOTOR (LONG)	1		
19	11	89481	NUT, THRU BOLT AND STUD	6		
20		95351A 1	UP PRESSURE RELIEF VALVE KI			
21		95355A1	DOWN PRESSURE RELIEF VALV			
22		95353A 1	THERMAL RELIEF VALVE KIT (R			
23		99073	OVERHAUL REPAIR KIT			
24	19	11005A 1	TRIAL-OUT VALVE PLUG (REPAI			