



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	10	839108601	BOLT	7	
2		839105080	SCREW-SET	2	
3		838005130	LOCKWASHER	2	
4	11	831908113	NUT	12	
5		838111610	ARM-VALVE ROCKER	6	
6		830129174	COLLAR	6	
7		838111620	ARM-VALVE ROCKER	6	
8		839511580	SUPPORT-VALVE ROCKER	1	
9		839511570	SUPPORT-VALVE ROCKER	5	
10	19	837391030	CAP-VALVE STEM	12	
11		830126119	LOCK-VALVE SPRING RETAINER	24	
12		837351260	SEAT-VALVE SPRING (UPPER)	12	
13	24	837311312	SPRING-VALVE (OUTER)	12	
14		837191340	SEAL-VALVE STEM OIL	6	
15	12	837341210	SEAT-VALVE SPRING (LOWER)	12	
16		837151570	VALVE-EXHAUST (STD)	6	
17		837111570	VALVE-INTAKE (STD)	6	
18		837511332	LIFTER-VALVE	12	
19		837191350	SEAL-VALVE STEM OIL	6	
20		837081160	ROD ASSEMBLY-VALVE PUSH	12	
21	10	837871161	SCREW-VALVE ADJUSTMENT	12	
22		839011200	SHAFT ASSEMBLY-VALVE ROCK	1	
23		833012160	PLUG-EXPANSION	2	
24		839511560	SUPPORT-VALVE ROCKER	1	