



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	831001562	STARTER ASSEMBLY	1		
1		831201310	YOKE ASSEMBLY	1		
2		831601380	ARMATURE ASSEMBLY	1		
3		832521190	BEARING	1		
4		832521200	BEARING	1		
5		830111260	CLUTCH-Starter Drive	1		
6		831151530	HOUSING	1		
7		831501640	SOLENOID-Starter	1		
8		831401220	HOLDER-Brush	1		
9		831301320	FRAME ASSEMBLY	1		
10		832501040	PINION	1		
11		832621090	HOLDER	1		
12		832191100	WASHER	2		
13		831121590	BOLT-Housing	2		
14		832191110	WASHER	5		
15		832191120	WASHER	1		
16		831121600	BOLT-Housing	3		
17		831010060	NUT	2		
18		831371080	FELT-Oil	1		
19		832361030	SPRING-Solenoid	1		
20		831541090	BOOT-Solenoid	1		
21		831681280	RING-Retainer	1		
22		831681290	RING-Retainer	1		
23		832261020	ROLLER-Clutch	5		
24		832661280	PLATE	1		
25		832191130	WASHER	1		
26		831391160	LEADWIRE	1		
NS	84	817193	BOOT-Insulating	1		