



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-		830401300	ALTERNATOR ASSEMBLY	1	
1		833911030	NUT-Pulley	1	
2		834311360	PULLEY	1	
3		834121140	COLLAR	1	
4		834411150	FAN	1	
5		833101470	FRAME ASSEMBLY-Drive End	1	
6		833111410	FRAME-Drive End	1	
7		833151180	FELT	2	
8		833151190	FELT	1	
9	30	838120122	BEARING	1	
10		833121510	PLATE-Retainer	1	
11		833621090	BOLT	3	
12		833151210	FELT	1	
13		833301600	ROTOR ASSEMBLY	1	
14		834121150	COLLAR	1	
15		833331030	RING-Spacer	1	
16		833501880	HOUSING ASSEMBLY	1	
17		833511060	BUSHING	1	
18		834101710	STATOR	1	
19		833561240	RECTIFIER	1	
20		833531370	HOLDER	1	
21		833871100	INSULATOR	2	
22		833871090	INSULATOR	2	
23		833871080	INSULATOR	1	
24		833871140	INSULATOR	1	
25		830105040	NUT-Terminal	4	
26		833871190	INSULATOR	2	
27		833541020	CONDENSER	1	
28		838005120	BOLT	1	
29	11	831006040	NUT	1	
30		833171480	BOLT	2	
31		833171490	BOLT	1	
32		830063023	BEARING-Ball	1	
33		838304082	BOLT	4	
34		833881150	COVER	1	
35		833871200	INSULATOR	1	
36		834451170	CLAMP	1	
37		833871120	INSULATOR	1	
38		830105040	NUT	3	
39		833701280	HOLDER ASSEMBLY-(w/BRUS	1	
40		833711170	BRUSH	2	