



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		834551130	PLATE	2		
2		835081530	BRACKET-Alternator	1		
2		835081470	BRACKET-Alternator	1		
3		835122000	BRACE-Alternator	1		
4		831811170	VALVE-Coolant	1		
5	33	831101160	GLOW PLUG ASSEMBLY	4		
6		831121151	WIRE-Ground	3		
7		831131050	INSULATOR-Glow Plug	4		
8		830401300	ALTERNATOR ASSEMBLY	1	SEE "ALTERNATOR"	
9		836911230	BRACKET	1		
10	50	831001562	STARTER ASSEMBLY	1	SEE "STARTER"	
11		834101220	RELAY-Starter	1		
12		836201250	RELAY-Glow Plug	1		
13		830149105	BELT SET-Alternator	1		
14		830642530	STRAP-Ground	1		
15		831910115	BOLT-Alternator Pivot	1		
16		838110300	BOLT-Adjust	1		
16		838110350	BOLT-Adjust	1		
17	10	839106202	BOLT	2		
18	10	839108202	BOLT	2		
19	11	830106050	NUT	2		
20		830110080	NUT	1		
21	11	830114110	NUT	1		
22	11	830910141	NUT	1		
23		836006140	WASHER-Flat	2		
24	12	836010180	WASHER-Flat	2		
25	12	836010330	WASHER-Flat	1		
25		830116121	WASHER-Flat	1		
26	12	836014270	WASHER-Flat	1		
27		836212270	WASHER-Flat	1		
28		838010250	WASHER-Lock	2		
29	13	838014350	WASHER-Lock	1		
30	10	830110250	BOLT	1		
31	10	830110300	BOLT	2		
32		830912119	BOLT	1		
33		831110701	BOLT	2		
34		830912102	PLUG	1		
35	25	835113103	O-RING	1		
36	12	835412100	WASHER-Sealing	1		
37		835510114	CONNECTOR-Flare	1		
37		832610120	CONNECTOR-Flare	1		