



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	22	831851110	BODY-Vent Valve	3		
2		831881020	SEAT-Valve	3		
3		832681960	PIPE-Coolant	1		
4		832681900	PIPE-Coolant	1		
5	32	832681990	PIPE-Coolant	1		
6		832682000	PIPE-Coolant	1		
7		832681890	PIPE-Coolant	1		
8		831001821	TURBOCHARGER ASSEMBLY	1	SEE "TURBOCHARGER (831001	
9		831071231	PIPE-Oil Drain	1		
10	27	831351080	GASKET	1		
11		831711740	PIPE-Oil Inlet	1		
12	27	831791170	GASKET-Turbo	1		
13		839041290	CLIP	1		
14		839932650	HOLDER-Clip	1		
15		830124344	BOLT-Banjo	1		
16		830124329	BOLT-Banjo	2		
17	10	830124303	BOLT-Banjo	1		
17		830124329	BOLT-Banjo	1		
18		830154248	HOSE-Coolant	1		
19	32	830154134	HOSE-Joiner	1		
20		830154148	HOSE-Coolant	1		
21	32	830233363	HOSE-Air	1		
22		830233437	HOSE-Air	1		
23	10	832910261	BOLT-Banjo	1		
24	10	838108200	BOLT	2		
25	10	839106202	BOLT	2		
26	10	839108162	BOLT	1		
27	10	839108301	BOLT	1		
28	11	830108070	NUT	1		
29	12	836008180	WASHER-Flat	1		
30		838010250	WASHER-Lock	1		
31	19	832610050	PLUG	1		
32	19	832613060	PLUG	1		
33	12	835410100	WASHER-Sealing	2		
34	12	835420150	WASHER-Sealing	8		
35	25	837225161	GROMMET	2		
36	25	837915107	GROMMET	3		
37	54	836920111	CLAMP	3		
38		836975103	CLAMP	2		
39	54	835424102	CLAMP	6		
40		831251110	GASKET-Oil Outlet	1		