



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		837081160	PUSH ROD	8		
2		837111521	VALVE-Intake	4		
3		837151570	VALVE-Exhaust	4		
4		837191340	SEAL-Valve	8		
5	24	837311312	SPRING-Valve-Intake and Exhaust	8		
6	12	837341210	SEAT-Spring-Lower	8		
7		837351260	SEAT-Spring-Upper	8		
8		837511332	LIFTER-Valve	8		
9	10	837871161	SCREW-Valve Adjust	8		
10		838111610	ARM-Rocker-Intake	4		
11		838111620	ARM-Rocker-Exhaust	4		
12		839011190	SHAFT-Rocker Arm	1		
13		839511560	SUPPDRT-Shaft	1		
14		839511570	SUPPDRT-Shaft	3		
15		839511580	SUPPDRT-Shaft	1		
16		830126119	LOCK-Valve Spring	16		
17		830129174	COLLAR-Spacer	4		
18	10	839108601	BOLT-Support	5		
19	11	831908113	NUT-Adjust Screw	8		
20		838005130	WASHER-Lock	2		
21		839105080	SCREW	2		
22		833012160	PLUG-Cup	2		