



14892

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	84	816626A 2	HARNESS ASSEMBLY, Key Switcl	1		
-	84	816626A15	HARNESS ASSEMBLY, Key Switcl	1		
-	84	816626A20	HARNESS ASSEMBLY, Key Switcl	1		
-	84	816626A25	HARNESS ASSEMBLY, Key Switcl	1		
1		90468A 1	COVER ASSEMBLY, Key	2		
2		76424	BRACKET	1		
3	16	55422	STUD, (#10-32 x 2.00)	2		
4	12	24676	WASHER, (.200 x .440 x .032)	2		
5	11	68219	NUT, (#10-32)	2		
6	13	89989	LOCKWASHER, (.818 Internal)	1		
7		816479	PLATE	1		
8	87	88107	KEY SWITCH (89491 Series)	1	(See Key Chart-Ignition Switch (89	
9	11	93543	NUT, Special	1		
10	38	90311	INSERT	1		
11	23	812711 1	SPACER, (.375)	2		
11	23	812711	SPACER, (.250)	2		
12		816492A 1	ALARM ASSEMBLY, Audio Warr	1		