



| Parts List | | | | | | |
|------------|-------|----------|-----------------------------|-----|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| - | | 76509A12 | OUTBOARD POWER TRIM ASSE | 1 | | |
| 1 | | 76395A 5 | HYDRAULIC PUMP ASSEMBLY | 1 | | |
| 2 | 25 | 48171 | "O" RING, HYDRAULIC PUMF | 4 | | |
| 3 | 10 | 79953 | SCREW, FILLER - HYDRAULIC | 1 | | |
| 4 | 12 | 20260 | WASHER, SEALING - HYDRAI | 1 | | |
| 5 | 10 | 38257 | SCREW, VENT - HYDRAULIC | 1 | | |
| 6 | 37 | 55901 | DECAL, INSTRUCTION - HYDRA | 1 | | |
| 7 | | 32979 | BATTERY LEAD (POSITIVE) | 1 | | |
| 8 | | 32988 | BATTERY LEAD (NEGATIVE) | 1 | | |
| 9 | | 45336 | PLATE, MANIFOLD | 1 | | |
| 10 | | 45197A 2 | CONTROL VALVE ASSEMBLY | 1 | | |
| -- | 25 | 48171 | "O" RING, HYDRAULIC PUMF | 4 | | |
| 11 | 25 | 45254 | "O" RING, CONTROL VALVE | 1 | | |
| 12 | 25 | 48171 | "O" RING, CONTROL VALVE | 1 | | |
| 13 | 25 | 45253 | "O" RING, CONTROL VALVE | 2 | | |
| 14 | 10 | 56500 | SCREW, CONTROL VALVE ANC | 4 | | |
| 16 | 22 | 38609 | PLUG, CONTROL VALVE (3/8-2) | 2 | | |
| 17 | 22 | 46008 | PLUG, CONTROL VALVE (1/2-2) | 2 | | |
| 18 | 84 | 74023A 1 | CONNECTOR AND HARNESS | 1 | | |
| 19 | | 45559 | TERMINAL BLOCK, HYDRAULIC | 1 | | |
| 20 | 10 | 48409 | SCREW, TERMINAL BLOCK TO | 2 | | |
| 21 | 10 | 62568 | SCREW, HARNESS LEADS TO | 2 | | |
| 22 | | 45377 | BRACKET, MOUNTING - HYDRA | 2 | | |
| 23 | 10 | 24234 | SCREW, MOUNTING BRACKET | 4 | | |
| 24 | 13 | 39107 | LOCKWASHER, MOUNTING BR | 4 | | |
| 25 | 11 | 21908 | NUT, MOUNTING BRACKET SC | 4 | | |
| 26 | 10 | 68298 | BOLT, HYDRAULIC PUMP TO B | 2 | | |
| 27 | 11 | 68411 | NUT, HYDRAULIC PUMP BOLT | 2 | | |
| 28 | 89 | 68258 | STARTER SOLENOID | 1 | | |
| 29 | 13 | 26996 | LOCKWASHER, STARTER SOL | 2 | | |
| 30 | 11 | 68219 | NUT, STARTER SOLENOID TEF | 2 | | |
| 31 | 13 | 26993 | LOCKWASHER, STARTER SOL | 2 | | |
| 32 | 11 | 68292 | NUT, STARTER SOLENOID TEF | 2 | | |
| 33 | | 46265 | BOOT, RUBBER - STARTER SO | 2 | | |
| 34 | | 74407 | BRACKET, MOUNTING - START | 1 | | |
| 35 | 10 | 21140 | SCREW, MOUNTING BRACKET | 2 | | |
| 36 | 13 | 26992 | LOCKWASHER, MOUNTING BR | 2 | | |
| 37 | 10 | 69052 | SCREW, STARTER SOLENOID | 2 | | |
| 38 | 13 | 26992 | LOCKWASHER, STARTER SOL | 2 | | |
| 39 | 11 | 21825 | NUT, STARTER SOLENOID SCF | 2 | | |