



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
	50	30955	STARTER MOTOR ASSEMBLY, C	1	DELCO-REMY #1113579	
	50	30842	STARTER MOTOR ASSEMBLY, C	.1	DELCO-REMY #1113578	
1	18	20209	COTTER PIN, FASTENING NUT	1,1		
2	11	20220	NUT, FASTENING	1,1		
3		26058	STOP, PINION	1,1		
4	24	26057	SPRING, ANTI-DRIFT	1,1		
5	12	26056	WASHER, ANTI-DRIFT SPRING	1,1		
6	23	26055	SLEEVE, ANTI-DRIFT SPRING	1,1		
7	43	29258	GEAR, PINION - DRIVE (9 TOOT	1,	MERC 700	
8		29257	SHAFT, SCREW - PINION GEAF	1,	MERC 700	
7	43	28536	GEAR, PINION - DRIVE (10 TOO	.1	MERC 800	
8		27113	SHAFT, SCREW - PINION GEAF	.1	MERC 800	
9	12	26052	WASHER, THRUST - CUSHION	1,1		
10		26049	CUP, CUSHION	1,1		
11		26050	CUSHION, RUBBER - RECOIL	1,1		
12	23	26051	SPACER, CUSHION	1,1		
13	12	26048	WASHER, THRUST - CUSHION	1,1		
14		31193	FRAME, DRIVE END - UPPER	1,1		
15	23	26044	BUSHING, DRIVE END FRAMI	1,1		
16		31186	ARMATURE	1,1		
17	12	31184	WASHER, THRUST - ARMATUR	1,1		
18	17	26045	DOWEL PIN, DRIVE END PLAT	1,1		
19		31190	FRAME AND FIELD ASSEMBLY	1,1		
20		31189	TERMINAL LEAD, F IELD COIL	1,1		
21	12	31177	WASHER, INSULATING - TER	1,1		
22	12	26033	WASHER, TERMINAL LEAD -	1,1		
23	12	26037	WASHER, RUBBER - TERMIN	1,1		
24	12	26032	WASHER, INSULATING - TER	1,1		
25	12	23243	WASHER, TERMINAL LEAD (C	1,1		
26	13	26992	LOCKWASHER, TERMINAL LI	2,2		
27	11	23868	NUT, TERMINAL LEAD	2,2		
28		31196	PACKAGE, BRUSHER HOLDE	1,1		8
29	24	31170	SPRING, STARTER BRUSH	2,2		
30		31197	PACKAGE, BRUSH REPLACE	1,1		8
29	24	31170	SPRING, STARTER BRUSH	4,4		
31		31183	FRAME, COMMUTATOR END-	1,1		
32	10	31191	BOLT, THRU - FRAME TO FR	2,2		
33	13	26992	LOCKWASHER, THRU BOLT	2,2		