



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	30829	STARTER MOTOR ASSEMBLY, C	1	DELCO-REMY #1113577	
-	50	31976	STARTER MOTOR ASSEMBLY, C	.1	DELCO-REMY #1113517	
1		31175	LOCKWIRE, PINION STOP COIL	1,1		
2		31176	COLLAR, PINION STOP	1,1		
3		32418	MOTOR DRIVE	1,		
3		32406	MOTOR DRIVE	.1		
4	24	32407	SPRING, TENSION - MOTOR DR	1,1		
5		31181	FRAME, DRIVE END - UPPER	1,		
5		31193	FRAME, DRIVE END - UPPER	.1		
6	23	31167	BUSHING, DRIVE END FRAM	1,		
6	23	26044	BUSHING, DRIVE END FRAM	.1		
7		31180	ARMATURE	1,		
7		32404	ARMATURE	.1		
8	12	31168	WASHER, THRUST - ARMATUR	1,		
8	12	31184	WASHER, THRUST - ARMATUR	.1		
9	17	26045	DOWEL PIN, DRIVE END FRAM	1,1		
10		31192	FRAME AND FIELD ASSEMBLY	1,		
10		31190	FRAME AND FIELD ASSEMBLY	.1		
11		31169	TERMINAL LEAD, FIELD COIL	1,		
11		31189	TERMINAL LEAD, FIELD COIL	.1		
12	12	31177	WASHER, INSULATING - TERI	1,1		
13	12	26033	WASHER, TERMINAL LEAD - E	1,1		
14	12	26037	WASHER, RUBBER - TERMIN	2,2		
15	12	26032	WASHER, INSULATING - TERI	2,2		
16	12	23243	WASHER, TERMINAL LEAD (C	1,1		
17	13	26992	LOCKWASHER, TERMINAL LI	2,2		
18	11	23868	NUT, TERMINAL LEAD	2,2		
19		31171	PACKAGE, BRUSH HOLDER F	1,		8
19		31196	PACKAGE, BRUSH HOLDER F	.1		8
20	24	31170	SPRING, STARTER BRUSH	2,2		
21		31172	PACKAGE, BRUSH REPLACER	2,		8
21		31197	PACKAGE, BRUSH REPLACER	.1		8
20	24	31170	SPRING, STARTER BRUSH	4,4		
22		31179	FRAME, COMMUTATOR END	1,		
22		32405	FRAME, COMMUTATOR END	.1		
23	13	26992	LOCKWASHER, THRU BOLT	2,2		
24	32	32663	TUBE, INSULATION - THRU B	2		
25	10	26046	BOLT, THRU - FRAME TO FR	2,		
25	10	31191	BOLT, THRU - FRAME TO FR	.2		