



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	37274A	1 STARTER MOTOR ASSEMBLY,CI	1,...		
-	50	45822A	1 STARTER MOTOR ASSEMBLY,CI	,1,...		
-	50	48643A	1 STARTER MOTOR ASSEMBLY,CI	,,1,...		
-	50	57465A	1 STARTER MOTOR ASSEMBLY,CI	,,,1,...		
-	50	57867A	1 STARTER MOTOR ASSEMBLY,CI	,,,,1		
1		31175	LOCKWIRE, PINION STOP COU	1,1,1,...		
2		31176	COLLAR, PINION STOP	1,1,1,...		
3	11	35053	NUT, PINION STOP	,,1,1,...		
4		32406	MOTOR DRIVE	1,1,1,1,...		
5	24	32407	SPRING, TENSION - MOTOR DR	1,1,1,1,...		
6	392	3170A	1 PLATE ASSEMBLY, DRIVE EN	1,...		
6	392	3170	PLATE ASSEMBLY, DRIVE EN	,1,...		
6	392	3409	PLATE ASSEMBLY, DRIVE EN	,,1,...		
6	392	4261	PLATE ASSEMBLY, DRIVE EN	,,,1,...		
7	392	2518	BUSHING, DRIVE END PLATE	1,1,1,1,...		
8	392	2522	ARMATURE	1,1,...		
8	392	3406	ARMATURE	,,1,...		
8	392	3906	ARMATURE	,,,1,...		
8	392	4285	ARMATURE	,,,,1		
9	392	2523	PACKAGE, ARMATURE THRU	1,1,1,1,...		4
10	392	2520	FRAME AND FIELD ASSEMBLY	1,...		
10	392	3169	FRAME AND FIELD ASSEMBLY	,1,...		
10	392	3407	FRAME AND FIELD ASSEMBLY	,,1,1,...		
10	392	3782	FRAME AND FIELD ASSEMBLY	,,,,1		
11	392	2521	BRUSH AND TERMINAL SET	1,1,1,1,...		6
12	392	2514	SPRING SET, BRUSH(2 SPRING	2,2,2,2,...		
13	392	2519	BRUSH PLATE AND HOLDER A	1,1,1,1,...		
14	392	2515	END CAP ASSEMBLY, COMMU	1,1,1,1,...		
14	392	3408	END CAP ASSEMBLY, COMMU	,,1,...		
14	392	4260	END CAP ASSEMBLY, COMMU	,,,1,...		
--	392	2516	BUSHING, COMMUTATOR EN	1,1,1,1,...		
15	12	31760	WASHER, THRU BOLT	2,2,2,2,...		
16	13	26908	LOCKWASHER, THRU BOLT	2,2,2,2,...		
16	13	26993	LOCKWASHER, THRU BOLT	,,3,...		
17	392	2524	BOLT, THRU - END CAP TO EN	2,...		
17	392	3171	BOLT, THRU - END CAP TO EN	2,2,2,2,...		
17	392	3410	BOLT, THRU - END CAP TO EN	,,3,...		
17	392	4262	BOLT, THRU - END CAP TO EN	,,,,2,...		