



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
--		77518A 1	INSTALLATION KIT	1		
1		47488A 1	BRACKET	1		
2	10	34353	SCREW (1")	2		
3	12	20553	WASHER	1		
4	13	35048	LOCKWASHER	2		
5	10	34354	SCREW (1-1/2")	1		
6	13	35048	LOCKWASHER	1		
7		71648	BRACE	1		
8	10	35786	SCREW (1")	1		
9	13	35048	LOCKWASHER	1		
10	11	46335	NUT	1		
11	10	37612	SCREW (1-1/4")	1		
13	23	72057	SPACER	1		
14	32	49044	HOSE	1		
15		32877	COVER	1		
16	10	69100	SCREW (1")	2		
17		72408T	BELLOWS	2		
18		61937A 1	WATER DISTRIBUTION HOUSI	2		
19	23	52020	SLEEVE	2		
20	16	52988	STUD (3-1/2")	8		
21	27	99777-2	GASKET	4		
22	54	47715	CLIP	1		
23	54	815504220	CLAMP	2		
24	10	59645	SCREW (3/4")	8		
25		73813A 1	END CAP	2		
26	27	73814-1	GASKET	2		
27		68670A 2	THRU HULL WATER INTAKE A	1		
28		NLA	SCREW	4		3
29	46	72774A32	WATER PUMP ASSEMBLY	1		
30	46	72774A40	BODY	1		
31		87631A 4	COVER	1		
32	10	73275	SCREW	5		
33	12	20084	WASHER	5		
34	27	805215	GASKET	1		
35		94916	WEAR PLATE, OUTER	1		
36	27	94914	GASKET	2		
37	19	59504	PLUG	1		
38	47	59362-1	IMPELLER ASSEMBLY	1		
39	28	56662	KEY	1		
40		94576	WEAR PLATE, INNER	1		