



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-		77518A 1	INSTALLATION KIT	1	
1		47488A 1	BRACKET	1	
2	10	34353	SCREW (1")	2	
3	12	20553	WASHER	1	
4	13	35048	LOCKWASHER	2	
5	10	34354	SCREW (1-1/2")	1	
6	13	35048	LOCKWASHER	1	
7		71648	BRACE	1	
8	10	35786	SCREW (1")	1	
9	13	35048	LOCKWASHER	1	
10	11	46335	NUT	1	
11	10	37612	SCREW (1-1/4")	1	
13	23	72057	SPACER	1	
14	32	49044	HOSE	1	
15		32877	COVER	1	
16	10	69100	SCREW (1")	2	
17		72408T	BELLOWS	2	
18		61937A 1	WATER DISTRIBUTION HOUSI	2	
19	23	52020	SLEEVE	2	
20	16	52988	STUD (3-1/2")	8	
21	27	99777-2	GASKET	4	
22	54	47715	CLIP	1	
23	54	815504220	CLAMP	2	
24	10	59645	SCREW (3/4")	8	
25		73813A 1	END CAP	2	
26	27	73814-1	GASKET	2	
27		68670A 2	THRU HULL WATER INTAKE A	1	
28		NLA	SCREW	4	3
29	46	72774A32	WATER PUMP ASSEMBLY	1	
30	46	72774A40	BODY	1	
31		87631A 4	COVER	1	
32	10	73275	SCREW	5	
33	12	20084	WASHER	5	
34	27	805215	GASKET	1	
35		94916	WEAR PLATE, OUTER	1	
36	27	94914	GASKET	2	
37	19	59504	PLUG	1	
38	47	59362-1	IMPELLER ASSEMBLY	1	
39	28	56662	KEY	1	
40		94576	WEAR PLATE, INNER	1	