



15568

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-		88688A66	REMOTE CONTROL	1	(Non Trim)	13
-		88688A68	REMOTE CONTROL	1	(Outboard)	13
-		88688A70	REMOTE CONTROL	1	(Mercruiser)	13
1		824043A 4	HANDLE ASSEMBLY	1	(Outboard and Mercruiser)	
1		824043A 1	HANDLE ASSEMBLY	1	(Quality Two for Non Trim)	
2		824039	GRIP, Upper	1	(Outboard and Mercruiser)	
3		824038	GRIP, Upper	1	(Non Trim)	
4	10	72415	SCREW, (#10-16 x 1.00)	4		
5	87	18286A41	SWITCH ASSEMBLY	2	(Outboard and Mercruiser)	
6		824049	CAP, Front	1	(Outboard and Mercruiser)	
7		824050	CAP, Back	1	(Outboard and Mercruiser)	
8		822201	CARRIER, Double Switch	1	(Outboard and Mercruiser)	
9	23	822980 2	BUSHING, Flex, Black	2		
10	10	822981 1	SET SCREW, (.250-20 x .187)	2		
11		824045A 1	BUTTON ASSEMBLY, Throttle	2		
12		824032A 6	COVER ASSEMBLY, Dual	1		
13	37	824670 2	DECAL, Top	1		
14		824036A 1	MASK KIT	1		
15	53	822433 1	RING, Circular Push	2		
16		824034A 1	BASE ASSEMBLY	1		
17	27	824029 1	GASKET	1		
18		824031	BRACKET, Mounting	2		
19	10	66687	SCREW, (#10-32 x 1.50)	4		
20	11	42290	WELL NUT, (#10-32)	4		
21	10	89043	SCREW, (#10-32 x 4.00)	2		
22	11	29488	NUT, (#10-32)	2		
23		822434	ANCHOR, Cable Tie	1		
24	54	816311T	CABLE TIE, (8.00 Inches)	3		
25		49440	NUT, (.468-32)	1	(Mercruiser)	
26		85218A 5	PLATE ASSEMBLY, Switch Moun	1	(Mercruiser)	
27	16	55422	STUD, (#10-32 x 2.00)	2	(Mercruiser)	
28		76424	BRACKET, Switch Mounting	1	(Mercruiser)	
29	12	24676	WASHER, (.200 x .440 x .032)	2	(Mercruiser)	
30	11	68219	NUT, (#10-32)	2	(Mercruiser)	
31	84	824783A 1	HARNESS ASSEMBLY, Extensio	2	(Outboard)	
32	84	824783A 4	HARNESS ASSEMBLY, Extensio	1	(Mercruiser)	