



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		34659A 4	RIDE-GUIDE STEERING WHEEL	1		
2	38	34662	BUTTON, INDICATOR - STEERI	1		
3		34658	CAP, STEERING WHEEL	1		
4		34654	HUB, INDICATOR - STEERING	1		
5	23	38347	BUSHING, STEERING WHEEL	1		
6	37	57221A 1	DECAL SET, STEERING WHEEL	1		
7	10	20646	SCREW, HUB TO STEERING W	4		
8	10	20776	SCREW, CAP AND HUB TO ST	1		
9	13	26992	LOCKWASHER, CAP AND HUB	1		
10	12	29954	WASHER, CAP AND HUB SCRE	1		
11		34663	SHAFT, PINION	1		
--		34667A 5	RIDE-GUIDE STEERING KIT (2C	1		
--		34668A 5	RIDE-GUIDE STEERING KIT (9C	1		
12	12	27966	WASHER, LOWER - STEERING	1		
13	11	23161	NUT, STEERING WHEEL TO H	1		
14	10	34660	BOLT, STEERING WHEEL TO C	1		
14	10	34661	BOLT, STEERING WHEEL TO C	1		
15	23	29097	BUSHING, STEERING WHEEL	2		
16		34655 2	BRACKET, STEERING WHEEL	1		
16		34657 2	BRACKET, STEERING WHEEL	1		
17	37	37401	DECAL, INSIGNIA (QUICKSILV	1		
18		29220	SHAFT, STEERING WHEEL (20	1		
18		25890	SHAFT, STEERING WHEEL (90	1		
19	12	25897	WASHER, SHAFT TO GEAR RA	1		
20	23	25901	BUSHING, GEAR RACK HOUSIN	2		
21		25884	HOUSING, GEAR RACK	2		
22		25887	RACK, GEAR	1		
23		25895A 1	TUBE, GEAR RACK (CABLE ENI	1		
24		25896	TUBE, GEAR RACK (OPEN END	1		
25		26059	CAP, RUBBER - GEAR RACK TL	1		
26		25898	PINION, GEAR RACK	1		
27	10	20784	SCREW, GEAR RACK HOUSING	6		
28	10	24217	SCREW, GEAR RACK HOUSING	1		
29	11	46887	NUT, GEAR RACK HOUSING CL	6		
30	11	49197	NUT, GEAR RACK HOUSING CL	1		
31		29215	BRACKET, STEERING WHEEL	1		
31A		29398	BRACKET, STEERING WHEEL	1		
32	10	29222	SCREW, BRACKET TO GEAR R	1		
33	23	29210	SPACER, BRACKET TO GEAR F	1		
33	23	29397	SPACER, BRACKET TO GEAR F	1		