



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-		39926A	1 STEERING HANDLE ASSEMBLY,	1		4
-		20591A13	STEERING HANDLE ASSEMBLY	1		
1		20591A11	STEERING HANDLE ASSEMB	1		
2	15	20729	SHIM, STEERING HANDLE (C	2		
3	13	20730	WASHER, WAVE - STEERING	1		
4	32	39926A	1 TUBE ASSEMBLY, STEERING	1		
5	23	20733	BUSHING, STEERING HANDL	1		
6	15	20729	SHIM, STEERING HANDLE TL	AR		6
7	43	23221	GEAR, PINION - STEERING	1		
8	17	24865	PIN, PINION GEAR TO STEEF	1		
9		38464	ELBOW, STEERING HANDLE	1		
10	23	26856	BUSHING, NYLON - SHAFT AND	1		
11		45058A	1 SHAFT AND GEAR ASSEMBLY,	1		
12	24	38741	SPRING, COMPRESSION - SHA	1		
13	23	26954	BUSHING, NYLON - END COVEI	2		
14		38483	END COVER, SHAFT AND GEAR	1		
15	53	38476	RING, SNAP - END COVER RET	1		
16		45035	ARM, THROTTLE - SHAFT AND	1		
17	17	26759	PIN, ROLL - THROTTLE ARM TI	1		
18	12	34437	WASHER, SHAFT AND GEAR	1		
19	11	20102	NUT, THROTTLE ARM TO SHA	1		
20		45072	ROD, THROTTLE	1		
21	11	21869	NUT, JAM - THROTTLE ROD (1.	1		
22		38475	ROD END, THROTTLE ROD	1		
23	10	21091	SCREW, STEERING HANDLE T	1		
24	11	20361	NUT, STEERING HANDLE SCRI	1		
25	10	32571	SCREW, SET - STEERING ELBO	1		
26	11	T20890	NUT, STEERING ELBOW SET S	1		
27		45025	BRACKET, STEERING HANDLE	1		
28	12	38503	WASHER, STEERING ELBOW	1		
29	11	22339	NUT, STEERING ELBOW TO ST	1		
30		20737	PLUG, FRICTION - STEERING	2		
31	24	20609	SPRING, FRICTION PLUG SCRE	2		
32	10	20608	SCREW, FRICTION PLUG - STE	2		
33	10	20646	SCREW, COVER TO STEERING	1		
34	17	45065	PIN, DETENT - SHIFT LEVER	1		
35	24	35210	SPRING, TENSION - SHIFT LEV	1		
36	24	35227	SPRING, COMPRESSION - SHIF	1		
37	10	38477	SCREW, SET - SHIFT LEVER DI	1		
38		45043A	1 SHIFT LEVER ASSEMBLY	1		