



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		35718A 2	POWER SHIFT ASSEMBLY, COM	1		
1		38B38A2	POWER SHIFT ASSEMBLY, COM	1		
2	16	36389	STUD, OUTPUT CABLE - POWE	1,1		
3	11	34688	NUT, OUTPUT CABLE STUD	1,1		
4	10	36154	SCREW, INPUT CABLE TO POW	1,1		
5	11	34688	NUT, INPUT CABLE SCREW	1,1		
6	18	36002	COTTER PIN, OUTPUT CABLE	1,1		
7		36149	PLUG, FELT - POWER SHIFT C	1,1		
8		316A92	FLANGE, INLET - POWER SHIF	1,1		
9	27	36151	GASKET, INLET RANGE	1,1		
10	10	21477	SCREW, INLET FLANGE TO PO	2,2		
11	13	26993	LOCKWASHERS -INLET FLANG	2,2		
12		35809	DUST SHIELD, POWER SHIFT	1,1		
13	54	45442	CLAMP, DUST SHIELD TO POW	1,1		
14		36150	SPACER, FELT - POWER SHIF	1,1		
15	54	37295	CLAMP, VACUUM HOSE TO POW	1,1		
16	32	36164	HOSE, VACUUM - POWER SHIF	1,1		
17	54	37295	CLAMP, VACUUM HOSE TO EN	1,1		
18	22	32820	FITTING, VACUUM HOSE	1,1		
19	23	36159	BUSHING, REDUCER - VACUUM	1,1		
20	22	36221	CONNECTOR, VACUUM HOSE	1,1		
21	37	37361	DECAL, POWER SHIFT	1,1		