



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-		48250A 4	RIDE-GUIDE TILT MOUNT ASSEM	1		
1		48227 2	POST, TILT - STEERING WHEEL	1		
2	37	32710	STRIP, TRIM - TILT POST	1		
3	23	29097	BUSHING, NYLON - TILT POST	1		
4	10	29223	BOLT, STEERING WHEEL TO T	1		
5		48228 2	HOUSING, TILT POST MOUNTI	1		
6	10	48232	SCREW, MOUNTING HOUSING	2		
7	11	48238	NUT, MOUNTING HOUSING SC	2		
8	23	48237	BUSHING, NYLON - MOUNTING	2		
9	25	48182	SEAL, MOUNTING HOUSING SI	2		
10	16	29208	STUD, MOUNTING HOUSING T	4		
11	12	26825	WASHER, MOUNTING HOUSING	4		
12	11	35814	NUT, MOUNTING HOUSING ST	4		
13		48224	LEVER, TILT ADJUSTING	1		
14	29	48235	PIN, DETENT - TILT ADJUSTINI	1		
15	13	28943	WASHER, WAVE - TILT ADJUS	1		
16		48225 2	HOUSING, TILT ADJUSTING LE	1		
17	17	20009	PIN, DETENT - TILT ADJUSTINI	1		
18	24	35227	SPRING, TENSION - DETENT P	1		
19	19	20011	WELCH PLUG, DETENT PIN	1		
20	10	48240	SCREW, LEVER HOUSING TO I	2		
21	10	48240	SCREW, TENSION SPRING SP	1		
22	23	48233	SPACER, TENSION SPRING	1		
23	24	48234	SPRING, TENSION - TILT ADJU	1		
24		29220	SHAFT, STEERING WHEEL	1		
25	12	25897	WASHER, SHAFT TO GEAR RA	1		
26	23	25901	BUSHING, GEAR RACK HOUSIN	2		
27		48226	HOUSING, GEAR RACK	2		
28	10	20784	SCREW, GEAR RACK HOUSING	5		
29	11	46887	NUT, GEAR RACK CLAMPING S	5		
30		26059	CAP, RUBBER - GEAR RACK TL	1		
31		25896	TUBE, GEAR RACK (OPEN EN	1		
32		25895A 1	TUBE, GEAR RACK (CABLE EN	1		
33		25887	RACK, GEAR	1		
34		25898	PINION, GEAR RACK	1		
35	10	48236	SCREW, GEAR RACK HOUSING	2		
36	13	48300	LOCKWASHER, GEAR RACK CL	2		
37	12	48241	WASHER, LOWER - STEERING	1		
38	11	23161	NUT, STEERING WHEEL TO HC	1		