



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-		37620A10	POWER STEERING PUMP MOUN	1		
1	57	52692	"V" BELT, HYDRAULIC PUMP C	1		
2		46761	PULLEY, CRANKSHAFT	1		
3	10	35871	SCREW, PULLEY TO CRANKSH	3		
4	12	25909	WASHER, PULLEY SCREW	3		
5		49770	OIL COOLER	1		
6	54	32780	CLAMP, WATER HOSES TO OIL	2		
7	22	37760	ELBOW, HOSES TO OIL COOLE	2		
8	32	52406	HOSE, RETURN - HYDRAULIC I	1		
9	54	37295	CLAMP, RETURN HOSE TO HY	2		
10	54	38888	CLAMP, OIL COOLER TO BRAC	2		
11		52803	BRACKET, OIL COOLER	1		
12	10	52693	BOLT, OIL COOLER BRACKET	2		
13	13	27969	LOCKWASHER, OIL COOLER BI	2		
14		52696	BRACE, ADJUSTING - HYDRAU	1		
15	12	38622	WASHER, HYDRAULIC PUMP T	1		
16	13	27969	LOCKWASHER, HYDRAULIC PL	1		
17	11	28010	NUT, HYDRAULIC PUMP TO AC	1		
18	10	20359	SCREW, MOUNTING BRACKET	1		
19	11	28010	NUT, MOUNTING BRACKET SC	1		
20		37625	BRACKET, MOUNTING - ADJUS	1		
21	10	21077	SCREW, MOUNTING BRACKET	1		
22	13	27969	LOCKWASHER, MOUNTING BR	1		
23		49181	PULLEY, HYDRAULIC PUMP	1		
24	12	21901	WASHER, HYDRAULIC PUMP F	1		
25	11	25899	NUT, PULLEY TO HYDRAULIC	1		
26		48785A	BRACKET ASSEMBLY, MOUNTI	1		
27	10	21077	SCREW, MOUNTING BRACKET	1		
28	10	26487	SCREW, MOUNTING BRACKET	2		
29	13	27969	LOCKWASHER, MOUNTING BR	3		
30	23	36365	SPACER, MOUNTING BRACKET	1		
31	23	36534	SPACER, MOUNTING BRACKET	2		
32	10	48989	SCREW, MOUNTING BRACKET	1		
33	13	27969	LOCKWASHER, MOUNTING BR	1		
34	12	25909	WASHER, MOUNTING BRACK	1		
35		52694	SPACER BLOCK	1		
36	10	48115	SCREW, SPACER BLOCK TO ET	1		
37	13	27969	LOCKWASHER,SPACER BLOCK	1		