



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		37620A	2 POWER STEERING PUMP MOUN	1		
-		37620A	4 POWER STEERING PUMP MOUN	.1		
1	57	37619	"V" BELT, HYDRAULIC PUMP C	1,1		
2		36369	PULLEY, CRANKSHAFT	1,1		
3	10	32775	SCREW, PULLEY TO CRANKSH	3		
3	10	33162	SCREW, PULLEY TO CRANKSH	.3		
4	13	27969	LOCKWASHER, PULLEY SCRE	3,3		
5		36370	SPACER, CRANKSHAFT PULLE	1,1		
6		37633	BRACKET, OIL COOLER	1		
6		34413	BRACKET, OIL COOLER	.1		
7	54	37631	CLAMP, OIL COOLER TO ENGI	2		
7		34409	CLAMP, OIL COOLER TO ENGI	.2		
-		38873	PAD, OIL COOLER CLAMP	.2		
-	27	34345	GASKET, EXHAUST MANIFOLD	.2		
8	10	36355	SCREW, CLAMP TO ENGINE (3	2		
8	10	22460	SCREW, CLAMP TO ENGINE (3	.2		
9	13	27969	LOCKWASHER, OIL COOLER CI	2,2		
10	23	45353	SPACER, OIL COOLER CLAMP	2		
11	11	25269	NUT, OIL COOLER CLAMP SCR	.2		
12		34414	OIL COOLER	1,1		
13	22	37760	ELBOW, RETURN HOSE TO OIL	2,2		
14	32	37635	HOSE, OUTLET - THERMOSTA	1		
14	32	34407	HOSE, OUTLET - THERMOSTA	.1		
15	54	32880	CLAMP, INTAKE AND OUTLET	2,2		
16	32	37573	HOSE, INTAKE - OIL COOLER T	1		
16	32	34346	HOSE, INTAKE - OIL COOLER T	.1		
17	32	37869	HOSE, RETURN - OIL COOLER	1		
17	32	38871	HOSE, RETURN - OIL COOLER	.1		
18	54	37295	CLAMP, RETURN HOSE TO OIL	2,2		
19		37621	BRACKET, MOUNTING - HYDR	1,1		
20	10	37627	SCREW, MOUNTING BRACKET	1,1		
21	11	25269	NUT, MOUNTING BRACKET SC	2,2		
22	10	34353	SCREW, MOUNTING BRACKET	1,1		
23	10	26632	SCREW, MOUNTING BRACKET	2,2		
24	13	27969	LOCKWASHER, MOUNTING BR	3,3		
25	23	36365	SPACER, MOUNTING BRACKET	1,1		
26	23	36534	SPACER, MOUNTING BRACKET	2,2		
27		37247	PULLEY, HYDRAULIC PUMP	1,1		
28	12	21901	WASHER, HYDRAULIC PUMP F	1,1		
29	11	25899	NUT, PULLEY TO HYDRAULIC	1,1		