



			Parts List			
Ref	Class	Part	Description	Qty	Comment	Footnote
--		34667A 5	RIDE-GUIDE STEERING KIT (20 C	1		
--		34668A 5	RIDE-GUIDE STEERING KIT (90 C	1		
12	12	27966	WASHER, LOWER - STEERING	1,1		
13	11	23161	NUT, STEERING WHEEL TO HC	1,1		
14	10	34660	BOLT, STEERING WHEEL TO C	1		
14	10	34661	BOLT, STEERING WHEEL TO C	1		
15	23	29097	BUSHING, STEERING WHEEL I	2,2		
16		34655 2	BRACKET, STEERING WHEEL I	1		
16		34657 2	BRACKET, STEERING WHEEL I	1		
17	37	37401	DECAL, INSIGNIA (QUICKSILVE	1,1		
18		29220	SHAFT, STEERING WHEEL (20	1		
18		25890	SHAFT, STEERING WHEEL (90	1		
19	12	25897	WASHER, SHAFT TO GEAR RA	1,1		
20	23	25901	BUSHING, GEAR RACK HOUSIN	2,2		
21		25884	HOUSING, GEAR RACK	2,2		
22		25887	RAK, GEAR	1,1		
23		25895A 1	TUBE, GEAR RACK (CABLE ENI	1,1		
24		25896	TUBE, GEAR RACK (OPEN EN	1,1		
25		26059	CAP, RUBBER - GEAR RACK TL	1,1		
26		25898	PINION, GEAR RACK	1,1		
27	10	20784	SCREW, GEAR RACK HOUSING	6,6		
28	10	24217	SCREW, GEAR RACK HOUSING	1,1		
29	11	46887	NUT, GEAR RACK HOUSING CL	6,6		
30	11	49197	NUT, GEAR RACK HOUSING CL	1,1		
31		29215	BRACKET, STEERINGWHEEL A	1		
31A		29398	BRACKET, STEERING WHEEL I	1		
32	10	29222	SCREW, BRACKET TO GEAR R	1,1		
33	23	29210	SPACER, BRACKET TO GEAR F	1		
33	23	29397	SPACER, BRACKET TO GEAR F	1		
34	12	25909	WASHER, BRACKET TO GEAR	1,1		
35	11	20509	NUT, BRACKET TO GEAR RACK	1,1		
36	10	22040	SCREW, STEERING BRACKET	2		
36	10	20705	SCREW, STEERING BRACKET	2		
37	23	29209	SPACER, STEERING BRACKET	2,2		
38	12	20959	WASHER, STEERING BRACKET	2,2		
39	11	21612	NUT, STEERING BRACKET SPA	2,2		
40	16	21831	STUD, SPACER TO STEERING	2,2		
41	16	29208	STUD, STEERING BRACKET MI	1,1		
42	12	26825	WASHER, STEERING BRACKET	1,1		
43	11	35814	NUT, STEERING BRACKET MO	1,1		