



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		29071A 1	RIDE-GUIDE STEERING WHEEL	1		
-		29401A 1	RIDE-GUIDE STEERING WHEEL	.1		
1		29071A 6	STEERING WHEEL ASSEMBLY	1,1		
2	38	29089	INSIGNIA (QUICKSILVER)	1,1		
3	38	29088	PLATE, NAME (RIDE-GUIDE)	1,1		
-	92	30835	TUBE, ADHESIVE CAPSULE	1,1		
4	10	29223	BOLT, STEERING WHEEL TO C	1		
4	10	29400	BOLT, STEERING WHEEL TO G	1		
5		29086	BRACKET, STEERING WHEEL I	1		
5		29399	BRACKET, STEERING WHEEL I	1		
6	23	29097	BUSHING, STEERING WHEEL	2,2		
7	16	29208	STUD, STEERING BRACKET MI	1,1		
8	12	26825	WASHER, STEERING BRACKET	1,1		
9	11	20102	NUT, STEERING BRACKET STL	1,1		
10	16	21831	STUD, SPACER TO STEERING	2,2		
11	23	29209	SPACER, STEERING BRACKET	2,2		
12	12	20959	WASHER, STEERING BRACKET	2,2		
13	11	21612	NUT, STEERING BRACKET SPA	2,2		
14		29215	BRACKET, GEAR RACK HOUSING	1		
14A		29398	BRACKET, GEAR RACK HOUSING	.1		
15	10	22040	SCREW, HOUSING BRACKET T	2		
15	10	20705	SCREW, HOUSING BRACKET T	2		
16	13	26993	LOCKWASHER, BRACKET TO E	2		
17	10	29222	SCREW, GEAR RACK HOUSING	1,1		
18	23	29210	SPACER, HOUSING TO BRACKET	1		
18	23	29397	SPACER, HOUSING TO BRACKET	1		
19	12	25909	WASHER, HOUSING TO BRACKET	2		
20	11	20509	NUT, HOUSING TO BRACKET E	1,1		
21		29220	SHAFT, STEERING WHEEL	1		
21		25890	SHAFT, STEERING WHEEL	.1		
22	12	25897	WASHER, GEAR RACK PINION	1,1		
23	23	25901	BUSHING, GEAR RACK HOUSING	2,2		
24		25887	RACK, GEAR	1,1		
25		25884	HOUSING, GEAR RACK	2,2		
26		25895A 1	TUBE ASSEMBLY, GEAR RACK	1,1		
27		25896	TUBE, GEAR RACK (OPEN END)	1,1		
28		26059	CAP, RUBBER - GEAR RACK TL	1,1		
29		25898	PINION, GEAR RACK	1,1		
30	10	20784	SCREW, GEAR RACK HOUSING	6,6		
31	11	20361	NUT, GEAR RACK HOUSING CL	6,6		