



				Parts List			
Ref	Class	Part	Description	Qty	Comment	Footnote	
-		31269A 1	RIDE-GUIDE STEERING WHEEL	1,			
-		31331A 1	RIDE-GUIDE STEERING WHEEL	,1			
1		31268A 1	STEERING WHEEL ASSEMBLY	1,1			
2	38	31444	INSIGNIA (QUICKSILVER)	1,1			
3		31344	EMBLEM (RIDE-GUIDE), STEER	1,1			
4	10	31441	SCREW, EMBLEM TO STEERIN	3,3			
5	10	29223	BOLT, STEERING WHEEL TO C	1,			
5	10	29400	BOLT, STEERING WHEEL TO G	,1			
6	23	29097	BUSHING,STEERING WHEEL B	2,2			
7		31127	BRACKET,STEERING WHEEL A	1,	SEE NOTES		
7		31446	BRACKET,STEERING WHEEL A	1,	SEE NOTES		
7		31330	BRACKET,STEERING WHEEL A	,1	SEE NOTES		
7		31442	BRACKET,STEERING WHEEL A	,1	SEE NOTES		
8		31128	RING, MOUNTING BRACKET (E	1,1	SEE NOTES		
9	10	22022	SCREW, RING TO MOUNTING I	3,3	SEE NOTES		
8A	37	31443	DECAL, OVERLAY TRIM STRIP	1,1			
10		29220	SHAFT, STEERING WHEEL	1,			
10		25890	SHAFT, STEERING WHEEL	,1			
11	12	25897	WASHER, SHAFT TO GEAR RA	1,1			
12	23	25901	BUSHING, GEAR RACK HOUSIN	2,2			
13		25884	HOUSING, GEAR RACK	2,2			
14		25887	RACK, GEAR	1,1			
15		25895	TUBE, GEAR RACK (CABLE ENI	1,1			
16		25896	TUBE, GEAR RACK (OPEN END	1,1			
17		26059	CAP, RUBBER - GEAR RACK TL	1,1			
18		25898	PINION, GEAR RACK	1,1			
19	10	20784	SCREW, GEAR RACK HOUSING	6,6			
20	10	24217	SCREW, GEAR RACK HOUSING	1,1			
21	11	20361	NUT, GEAR RACK HOUSING CL	6,6			
22	11	20509	NUT, GEAR RACK HOUSING CL	1,1			
23	12	27966	WASHER, LOWER - STEERING	1,1			
24	13	27969	LOCKWASHER, STEERING WH	1,1			
25	11	23161	NUT, STEERING WHEEL TO H	1,1			
26		29215	BRACKET, GEAR RACK HOUSIN	1,			
26A		29398	BRACKET, GEAR RACK HOUSIN	,1			
27	10	29222	SCREW, BRACKET TO GEAR R	1,1			
28	23	29210	SPACER, BRACKET TO GEAR F	1,			
28	23	29397	SPACER, BRACKET TO GEAR F	,1			
29	12	25909	WASHER, BRACKET TO GEAR	1,1			
30	11	20509	NUT, BRACKET TO GEAR RAC	1,1			