



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	-	3839A1	STEERING BRACKET ASSEMBLY	1,-		
1	-	52992A 1	STEERING BRACKET ASSEMBLY	-,1		
2	10	34352	SCREW, BRACKET TO STEERII	1,-		
2	10	37909	SCREW, BRACKET TO STEERII	-,1		
3	11	20509	NUT, STEERING BRACKET SCF	1,-		
4	23	35016	SPACER, SCREW TO BRACKET	-,1		