



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		45347A	1 FULL POWER TILT ASSEMBLY	1		
1		45060A	7 HYDRAULIC PUMP ASSEMBLY	1		
2	25	26834	"O" RING, HYDRAULIC PUMF	4		
3	10	46918	SCREW, VENT - HYDRAULIC	1		
4	13	46917	LOCKWASHER, HYDRAULIC I	1		
5	10	28634	SCREW, FILLER - HYDRAULIC	1		
6	12	20260	WASHER, SEALING - HYDRAULIC	1		
7		45325	CONNECTOR AND HARNESS	1		
8		45559	TERMINAL BLOCK, HYDRAULIC	1		
9	10	28192	SCREW, TERMINAL BLOCK TO	2		
10	10	30663	SCREW, HARNESS LEADS TO	2		
11		45382A	1 CONTROL VALVE ASSEMBLY	1		
--	25	26834	"O" RING, HYDRAULIC PUMF	4		
12	22	38609	PLUG, CONTROL VALVE (3/8-2)	1		
13	10	21091	SCREW, CONTROL VALVE TO I	4		
14	13	26992	LOCKWASHER, CONTROL VAL	4		
15	38	45372	DECAL, OIL INSTRUCTIONS - H	1		
16	54	37282	CLAMP, HYDRAULIC PUMP HAI	1		
17		37281	"D" WASHER, HYDRAULIC PUM	1		
18		45003	ADAPTOR, CONTROL HARNESS	1		
19		32979	BATTERY LEAD (POSITIVE)	1		
20		32988	BATTERY LEAD (NEGATIVE)	1		
--	10	20639	SCREW, HYDRAULIC PUMP TC	3		
21	16	21831	STUD, HYDRAULIC PUMP TO T	3		
22	11	21528	NUT, HYDRAULIC PUMP MOUN	3		
23		25661	STARTER SOLENOID	1		
24	13	26996	LOCKWASHER, STARTER SOL	2		
25	11	20645	NUT, STARTER SOLENOID TE	2		
26	13	26993	LOCKWASHER, STARTER SOL	2		
27	11	20083	NUT, STARTER SOLENOID TE	2		
28		46265	BOOT, RUBBER - STARTER SO	2		
29		45321	BRACKET, MOUNTING- START	1		
30	10	34290	SCREW, STARTER SOLENOID	2		
31	13	26992	LOCKWASHER, STARTER SOL	2		
32	11	21825	NUT, STARTER SOLENOID SCF	2		
33	10	21140	SCREW, MOUNTING BRACKET	2		
34	13	26992	LOCKWASHER, MOUNTING BR	2		
35	13	27660	LOCKWASHER, HYDRAULIC PL	1		
36	11	20645	NUT, MOUNTING BRACKET TO	1		
37	32	38755	HOSE, HYDRAULIC - ELBOW TI	2		