



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		46174A 1	FULL POWER TILT (USE WITH M	1		
-		46174A 3	FULL POWER TILT(USE WITH MI	1		
-		46174A 3	FULL POWER TILT(USE WITH MI	1		
-		46174A 2	FULL POWER TILT (USE WITH M	1		
1		46056A 6	HYDRAULIC PUMP ASSEMBLY	1		
2	25	26834	"O" RING, HYDRAULIC PUMF	4,4		
2	25	26834	"O" RING, HYDRAULIC PUMF	4,4		
3	10	28634	SCREW, FILLER - HYDRAULI	1,1,1		
4	12	20260	WASHER, SEALING - HYDRAI	1,1,1		
5	10	38257	SCREW VENT - HYDRAULIC F	1,1,1		
6	38	45372	DECAL, INSTRUCTION - HYDRA	1,1,1		
7	54	37282	CLAMP, HYDRAULIC PUM(L) HA	1,1,1		
8		37281	"D" WASHER, HYDRAULIC PUM	1,1,1		
9		32979	BATTERY LEAD (POSITIVE)	1,1,1		
10		32988	BATTERY LEAD (NEGATIVE)	1,1,1		
11		45382A 1	CONTROL VALVE ASSEMBLY	1,1,1		
-	25	26834	"O" RING HYDRAULIC PUMP	4,4,4		
12	22	38609	PLUG, CONTROL VALVE (3/8-2	1,1,1		
13	10	21091	SCREW, CONTROL VALVE TO	4,4,4		
14	13	26992	LOCKWASHER, CONTROL VAL	4,4,4		
15		45325	CONNECTOR AND HARNESS	1,1,1		
16		45559	TERMINAL BLOCKS HYDRAULI	1,1,1		
17	10	28192	SCREW, TERMINAL BLOCK TO	2,2,2		
18	10	30663	SCREW, HARNESS LEADS TO	2,2,2		
19		46166	BRACKET, MOUNTING - HYDRA	1,1,1		
20	10	35263	BOLT, HYDRAULIC PUMP BRAI	3,3,3		
21	11	35304	NUT, HYDRAULIC PUMP BOLT	3,3,3		
22	10	21962	SCREW, MOUNTING BRACKET	3,3,3		
23	12	20546	WASHER, MOUNTING BRACKE	3,3,3		
24	11	21528	NUT, MOUNTING BRACKET SC	3,3,3		
--	10	45765	SCREW, HYDRAULIC PUMP LO	2,2		
--	10	29877	SCREW, HYDRAULIC PUMP TC	1,1		
--	23	46047	SPACER, HYDRAULIC PUMP SI	3,3		
--	11	21528	NUT, HYDRAULIC PUMP SCRE	3,3		
25		25661	STARTER SOLENOID	1,1,1		
26	13	26996	LOCKWASHER, STARTER SOL	2,2,2		
27	11	20645	NUT, STARTER SOLENOID TE	2,2,2		
28	13	26993	LOCKWASHER, STARTER SOL	2,2,2		
29	11	20083	NUT, STARTER SOLENOID TE	2,2,2		
30		46265	BOOT, RUBBER - STARTER SO	2,2,2		