



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		32994A	1 POWER SWIVEL (12 DEGREES T	1		
-		32994A	2 POWER SWIVEL (0 DEGREES TF	1		
1		32961	GEAR HOUSING	1,1		
2	23	32942	BUSHING, WORM GEAR - GEAR	1,1		
3	23	32960	RACE, THRUST - WORM GEAR	4,4		
4	31	32958	ROLLER BEARING, WORM GE	2,2		
5	13	31030	WASHER, WAVE - WORM GEAR	2,2		
6	12	29629	WASHER, WORM GEAR	2,2		
7	43	32957	GEAR, WORM - GEAR HOUSING	1,1		
8		32943A	1 BEARING CARRIER ASSEMBLY	1,1		
9	23	32942	BUSHING, BEARING CARRIER	1,1		
10	53	25022	RING, RETAINING - WORM GE	1,1		
11		32947A	1 COUPLING ASSEMBLY, WORM	1,1		
12	17	20564	ROLL PIN, COUPLING	1,1		
13		32955A	1 MOTOR ASSEMBLY, GEAR HO	1,1		
14	17	23928	ROLL PIN, MOTOR	1,1		
15	12	20128	WASHER, MOTOR TO GEAR HO	2,2		
16	11	20645	NUT, MOTOR TO GEAR HOUSI	2,2		
17		33865	BINDER, MOTOR LEAD WIRES	1,1		
18		32953	ADAPTOR, GEAR HOUSING TO	1,1		
19	10	34071	SCREW, FLANGE - ADAPTOR T	2,2		
20	54	32954	CLAMP, ADAPTOR TO GEAR HO	1,1		
21	10	21807	SCREW, FLANGE CLAMP TENS	1,1		
22	11	24652	NUT, FLANGE CLAMP TENSION	1,1		
23		32946	SHAFT, WHEEL GEAR LOCKING	1,1		
24	23	32959	BUSHING, THRUST - WHEEL G	2,2		
25	23	32944	BUSHING, WHEEL GEAR - GEA	1,1		
26	43	32956	GEAR, WHEEL - GEAR HOUSING	1,1		
27	12	29954	WASHER, WHEEL GEAR TO SH	1,1		
28	13	26992	LOCKWASHER, WHEEL GEAR	1,1		
29	10	20776	SCREW, WHEEL GEAR TO SHA	1,1		
30	27	32950	GASKET, GEAR HOUSING COV	1,1		
31		32948	COVER, GEAR HOUSING	1,1		
32	10	24090	SCREW, GEAR HOUSING COVE	3,3		
33	13	26995	LOCKWASHER, GEAR HOUSING	3,3		
34		32949	SOLENOID, STARTING SWITCH	2,2		
35	10	22022	SCREW, SOLENOID TO GEAR	4,4		
36	394	1134A	2 GROUND STRAP ASSEMBLY, E	2,2		
37	11	20645	NUT, STARTING SWITCH SOLE	4,4		
38	11	20083	NUT, STARTING SWITCH SOLE	4,4		