



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		42207A 1	HOUSING ASSEMBLY,STARTER	1		
2		42690	BUSHING,STARTER ROPE	1		
3	53	42689	RETAINING RING	1		
4		42194A 2	RECOIL SPRING ASSEMBLY	1		
6		42171	LEVER,LOCK(UPPER)	1		
7	12	56681	WASHER,UPPER LOCK LEVER	1		
8		42173	LEVER,LOCK(LOWER)	1		
9	10	48408	SCREW,LOWER LOCK LEVER	1		
10	23	43787	SPACER,STARTER HOUSING SC	3		
11	10	40011128	SCREW,STARTER HOUSING AT	3		
12		19018	REST	1		
15		12674	SUPPORT	1		
16	10	40019111	SCREW REST TO STARTER HDL	2		
17	23	30977 2	SPACER,REST SCREW	4		
18	11	40063 3	NUT,REST SCREW	2		
19		42034A 1	SHEAVE,STARTER	1		
20	19	42707 1	CAP,STARTER SHEAVE	1		
20	19	817362	CAP,STARTER SHEAVE(CAP PLL	1		
21		42209	TAB,STARTER SHEAVE	3		
22	10	48408	SCREW,TAB	3		
23	50	12066A 9	ROPE,STARTER	1		
24		85174A 1	HANDLE ASSEMBLY,STARTER F	1		