



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1128	1890A 1	END CAP ASSEMBLY, UPPER	1		
2	26	29476	OIL SEAL	1		
3	25	31305	"O" RING	1		
4	30	32117	BEARING, BALL	1		
5	15	31283A 1	SHIM, END CAP TO CRANKCASE	AR		
6	10	30225	SCREW, END CAP MOUNTING	4		
7	836	2486A 3	CYLINDER BLOCK AND CRANKCASE	1		
8	22	30139	PLUG, PIPE - WATER PRESSURE	1		
9	16	35099	STUD, CARBURETOR MOUNTING	6		
10	16	26133	STUD, CRANKCASE TO DRIVE SHAFT	2		
11	17	20033	PIN, DOWEL - CYLINDER TO CRANKCASE	2		
12	17	20032	PIN, DOWEL - CYLINDER BLOCK TO CRANKCASE	3		
13	16	26134	STUD, CYLINDER BLOCK TO DRIVE SHAFT	2		
14	16	37653	STUD, CYLINDER BLOCK TO DRIVE SHAFT	2		
15	16	26135	STUD, CYLINDER BLOCK TO DRIVE SHAFT	2		
16	10	29877	SCREW, CRANKCASE TO CYLINDER BLOCK	3		
16	10	26132	SCREW, CRANKCASE TO CYLINDER BLOCK	2		
17	10	21574	SCREW, CRANKCASE TO CYLINDER BLOCK	1		
17	10	32293	SCREW, CRANKCASE TO CYLINDER BLOCK	3		
17	10	22040	SCREW, CRANKCASE TO CYLINDER BLOCK	17		
18	11	29250	NUT, CRANKCASE FASTENING	26		
19		26551	BRACKET, CLAMP EXTENSION	3		
20	10	36351	SCREW, MAIN BEARING LOCKING	3		
21	10	20359	SCREW, CENTER MAIN BEARING LOCKING	2		
22	14	20091	TAB WASHER, BEARING LOCKING	5		
23	1126	1751A 1	END CAP ASSEMBLY, LOWER	1		
24	21	28481A 1	CHECK VALVE ASSEMBLY, EXHAUST	1		
25	26	29476	OIL SEAL, LOWER	1		
26	26	29478	OIL SEAL, UPPER	1		
27	25	20081	"O" RING	1		
28	30	20080	BEARING, BALL	1		
29	15	20085A 1	SHIM, END CAP TO CRANKCASE	AR		
30	10	30225	SCREW, END CAP MOUNTING	3		
31	27	37740	GASKET, CYLINDER BLOCK TO EXHAUST MANIFOLD	1		
32		37713	PLATE, BAGGLE - EXHAUST MANIFOLD	1		
33	27	37741	GASKET, BAFFLE PLATE TO EXHAUST MANIFOLD	1		
34		37674	COVER, EXHAUST MANIFOLD	1		
35	10	38837	SCREW, MANIFOLD COVER MOUNTING	23		
36	13	21804	LOCKWASHER, SPARK PLUG LEAD	3		
37	54	37810	CLAMP, SPARK PLUG LEADS TO CRANKCASE	3		
38	22	22850	TUBE, BALANCE - MAIN BEARING	2		