



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1128	1890A 1	END CAP ASSEMBLY, UPPER	1,1		
2	26	29476	OIL SEAL	1,1		
3	25	31305	"O" RING	1,1		
4	30	32117	BEARING, BALL	1,1		
5	15	31283A 1	SHIM, END CAP TO CRANKCASE	AR,AR		
6	10	30225	SCREW, END CAP MOUNTING	4,4		
7	836	1852A 1	CYLINDER BLOCK AND CRANK	1,1		
8	23	23648	BUSHING, CRANKCASE - COWL	2,2		
9	22	30139	PLUG, PIPE - WATER PRESSUR	1,1		
10	16	21831	STUD, CARBURETOR MOUNTING	6,6		
11	16	26133	STUD, CRANKCASE TO DRIVE	2,2		
12	17	20033	PIN, DOWEL - CRANKCASE TO	2,2		
13	17	20032	PIN, DOWEL - CYLINDER BLOC	3,3		
14	16	26134	STUD, CYLINDER BLOCK TO D	2,2		
15	16	26135	STUD, CYLINDER BLOCK TO D	4,4		
16	10	29877	SCREW, CRANKCASE TO CYLIND	3,3		
16	10	26132	SCREW, CRANKCASE TO CYLIND	2,2		
17	10	21574	SCREW, CRANKCASE TO CYLIND	1,1		
17	10	32293	SCREW, CRANKCASE TO CYLIND	1,1		
17	10	22040	SCREW, CRANKCASE TO CYLIND	19,19		
18	11	29250	NUT, CRANKCASE FASTENING S	26,26		
19		26551	BRACKET, CLAMP EXTENSION	1,1		
20	10	20089	SCREW, MAIN BEARING LOCKIN	3,3		
20	10	26801	SCREW, MAIN BEARING LOCKIN	3,	SERIAL 00000000-01618984	
20	10	33853	SCREW, MAIN BEARING LOCKIN	,3	SERIAL 01618985-09999999	
21	10	20359	SCREW, CENTER MAIN BEARING	2,2		
22	14	20091	TAB WASHER, BEARING LOCKIN	5,5		
23	1126	1751A 1	END CAP ASSEMBLY, LOWER	1,1		
24	21	28481A 1	CHECK VALVE ASSEMBLY, ENC	1,1		
25	26	29476	OIL SEAL, LOWER	1,1		
26	26	29478	OIL SEAL, UPPER	1,1		
27	25	20081	"O" RING	1,1		
28	30	20080	BEARING, BALL	1,1		
29	15	20085A 1	SHIM, END CAP TO CRANKCASE	AR,AR		
30	10	30225	SCREW, END CAP MOUNTING	3,3		
31	27	31302	GASKET, CYLINDER BLOCK TO M	1,1		
32		31300	PLATE EXHAUST MANIFOLD	1,1		
33	27	31301	GASKET, MANIFOLD PLATE TO C	1,1		
34		31303	COVER, EXHAUST MANIFOLD	1,1		
35	10	28667	SCREW, MANIFOLD COVER MOL	23,23		
36	54	26519	CLAMP, SPARK PLUG LEADS TO	2,2		