



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		30263A 2	FUEL PUMP ASSEMBLY - UPPER	1,1		
2	27	23005	GASKET, CHECK VALVE TO HO	2,2		
3	21	30430	VALVE, CHECK - FUEL PUMP	2,2		
4		23004	RETAINER, CHECK VALVE	1,1		
5	10	20037	SCREW, RETAINER TO HOUSII	2,2		
6	27	24863	GASKET, FUEL PUMP	2,2		
7		23014	DIAPHRAGM, FUEL PUMP	1,1		
8		30461A 2	FUEL PUMP ASSEMBLY - LOWEF	1,1		
2	27	23005	GASKET, CHECK VALVE TO HO	2,2		
3	21	30430	VALVE, CHECK - FUEL PUMP	2,2		
4		23004	RETAINER, CHECK VALVE	1,1		
5	10	20037	SCREW, RETAINER TO HOUSII	2,2		
6	27	24863	GASKET, FUEL PUMP	2,2		
7		23014	DIAPHRAGM, FUEL PUMP	1,1		
9		30275	COVER, FUEL PUMP	2,2		
10	27	30276	GASKET, FUEL PUMP COVER	2,2		
11	10	29878	SCREW, FUEL PUMP MOUNTING	2,2		
12	10	30274	SCREW, FUEL PUMP MOUNTING	2,2		
13	10	30273	SCREW, FUEL PUMP MOUNTING	2,2		
14	32	31812A 1	FUEL LINE ASSEMBLY, PUMP TC	1,1		
14	32	32256A 1	FUEL LINE ASSEMBLY, PUMP TC	,1		
15	22	30174	ELBOW, UPPER CARBURETOR	1,1		
16	22	30175	SLEEVE, CARBURETOR STRAINI	1,1		
17	22	30177	NUT, UPPER CARBURETOR STF	1,1		
18	32	31552A 1	FUEL LINE ASSEMBLY, PUMP TC	1,1		
19	32	31553A 1	FUEL LINE ASSEMBLY, PUMP TC	1,1		
20	32	30176	FUEL LINE, ADAPTOR TO LOWEI	1,1		
21	22	30174	ELBOW, LOWER FUEL PUMP INL	1,1		
22	22	30175	SLEEVE, FUEL PUMP INLET ELBI	1,1		
23	22	30177	NUT, FUEL PUMP INLET ELBOW	1,1		
24		30186	ADAPTOR, CHECK UNIT (FUEL LI	1,1		
25		30187	STEM, CHECK UNIT ADAPTOR	1,1		
26	25	20415	"O" RING, ADAPTOR STEM	1,1		
27	24	30189	SPRING, ADAPTOR STEM	1,1		
28		30188	CUP WASHER, ADAPTOR	1,1		
29	10	22421	SCREW, ADAPTOR TO BOTTOM	2,2		
30	11	20184	NUT, ADAPTOR FASTENING SCF	2,2		
31	32	31550A 1	FUEL LINE ASSEMBLY, CARBURI	2,2		