



				Parts List			
Ref	Class	Part	Description	Qty	Comment	Footnote	
-	1623	1891A 6	GEAR HOUSING ASSEMBLY, COM	1			
1	1623	1891A 1	GEAR HOUSING ASSEMBLY	1			
2	16	30661	STUD, GEAR HOUSING TO D	1			
3	16	29078	STUD, GEAR HOUSING TO D	2			
4	16	30669	STUD, WATER PUMP BASE A	1			
5	16	30667	STUD, WATER PUMP BASE A	2			
6	31	29982	BEARING, ROLLER - DRIVE S	1			
7	45	30565	DRIVE SHAFT (STANDARD)	1			
8	43	31419	GEAR, PINION - DRIVE SHAFT	1			
9	11	30932	NUT, PINION GEAR TO DRIVE :	1			
10	15	30278A 1	SHIM, DRIVE SHAFT BALL BEA	AR			
11	30	20464	BEARING, BALL - DRIVE SHAFT	1			
12	53	30726	RING, RETAINING - BALL BEAR	1			
13	25	30224	"O" RING, WATER PUMP BASE	1			
14	46	31277A 1	WATER PUMP BASE ASSEMBL	1			
15	26	31489	OIL SEAL, WATER PUMP BAS	1			
16	17	29596	DOWEL PIN, WATER PUMP E	2			
17	27	31285	GASKET, LOWER - WATER PUI	1			
18		31287	PLATE, FACE - WATER PUMP E	1			
19	27	31286	GASKET, UPPER - FACE PLATE	1			
20	46	31273A 1	WATER PUMP BODY ASSEMBL	1			
21		30915	INSERT, WATER PUMP BOD	1			
22	26	31507	OIL SEAL, WATER PUMP BOD	1			
23	47	30221	IMPELLER, WATER PUMP	1			
24	17	29967	PIN, IMPELLER DRIVE	1			
25	10	30720	SCREW, WATER PUMP BODY	1			
26	13	26992	LOCKWASHER, WATER PUMP	3			
27	11	29598	NUT, WATER PUMP BODY FAS	2			
28	13	26993	LOCKWASHER, WATER PUMP	1			
29	11	28770	NUT, WATER PUMP BODY FAS	1			
30	25	30271	RING, RUBBER - CENTRIFUGAL	1			
31	26	29677	SEAL, RUBBER - WATER PUMF	1			
32	23	29804	SLEEVE, GUIDE - WATER INLE	1			
33	25	30613	"O" RING, UPPER - DRIVE SHA	1			
34	26	31282	SEAL, WATER PUMP BODY TO	1			
35	32	31272	TUBE, WATER INTAKE - GEAR	1			
36	26	29971	SEAL, GEAR HOUSING TO WA	1			
37		25136	SHAFT, SHIFT - LOWER	1			
38	18	20233	CLIP, RETAINING - SHIFT SHAF	1			
39	25	25439	"O" RING, SHIFT SHAFT BUSHI	1			
40	22	30617A 1	PUSHING ASSEMBLY, SHIFT SH	1			