



| Parts List | | | | | | |
|------------|-------|---------|------------------------------|-----|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 11 | 22339 | NUT, FLYWHEEL | 1,1 | | |
| 2 | 12 | 33001 | WASHER, FLYWHEEL NUT | 1,1 | | |
| 3 | 28 | 30250 | KEY, FLYWHEEL DRIVE | 1,1 | | |
| 4 | 216 | 1979A 2 | FLYWHEEL ASSEMBLY, COMPLE | 1,1 | | |
| 4 | 216 | 2229A 2 | FLYWHEEL ASSEMBLY, COMPLE | ,1 | | |
| 5 | 23 | 32157 | SPACER, LOWER - FLEXIBLE P | 1,1 | | |
| 6 | 23 | 23174 | SPACER, UPPER - FLEXIBLE PL | 1,1 | | |
| 7 | 50 | 30745 | RATCHET, FLYWHEEL | 1,1 | | |
| 8 | 10 | 32156 | SCREW, SPACERS AND RATCH | 3,3 | | |
| 9 | 11 | 20184 | NUT, SPACER AND RATCHET | 3,3 | | |
| 10 | 10 | 32156 | SCREW, FLEXIBLE PLATE TO F | 8,8 | | |
| 11 | 10 | 32173 | SCREW, PLATE AND HUB TO F | 8, | | |
| 11 | 10 | 32173 | SCREW, PLATE AND HUB TO F | ,8 | | |
| 12 | | 29788 | FLANGE, FLYWHEEL PULLEY | 1,1 | | |
| 13 | | 30306 | PULLEY, FLYWHEEL | 1,1 | | |
| 14 | 17 | 26618 | PIN, DOWEL - PULLEY TO FLY | 1,1 | | |
| 15 | | 29787 | HUB, FLYWHEEL PULLEY | 1,1 | | |
| 16 | 398 | 2035 | STATOR, ALTERNATOR SEE NO | 1,1 | | |
| 16 | 398 | 2188 | STATOR, ALTERNATOR SEE NO | ,1 | | |
| 17 | | 30050 | TERMINAL, STATOR LEAD WIF | 2,2 | | |
| 18 | 10 | 29283 | SCREW, STATOR TO UPPER EN | 4,4 | | |
| 18 | 10 | 32614 | SCREW, STATOR TO UPPER EN | ,4 | | |
| 19 | 54 | 24836 | CLIP, STATOR LEAD TO EXHAU | 1,1 | | |
| 20 | | 22789 | "D" WASHER, CLIP FASTENING | 1,1 | | |
| 21 | 10 | 30009 | SCREW, STATOR LEAD CLIP FA | 1,1 | | |
| 22 | 54 | 22783 | "S" CLIP, STATOR LEADS TO BO | 3,3 | | |