



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	2022A 7	GEAR HOUSING ASSEMBLY, COM	1		
1	1623	2022A 1	GEAR HOUSING ASSEMBLY	1		
2	16	30661	STUD, GEAR HOUSING TO D	1		
3	16	29078	STUD, GEAR HOUSING TO D	2		
4	16	30669	STUD, WATER PUMP BASE A	1		
5	16	30667	STUD, WATER PUMP BASE A	2		
6	31	29982	BEARING, ROLLER - DRIVE S	1		
7	45	30565	DRIVE SHAFT (STANDARD)	1		
8	43	31419	GEAR, PINION - DRIVE SHAFT	1		
9	11	30932	NUT, PINION GEAR TO DRIVE :	1		
10	15	30278A 1	SHIM, DRIVE SHAFT BALL BEA	AR		
11	30	20464	BEARING, BALL - DRIVE SHAFT	1		
12	53	30726	RING, RETAINING - BALL BEAR	1		
13	27	32438	GASKET, WATER PUMP BASE	1		
14	25	30224	"O" RING, WATER PUMP BASE	1		
15	46	32436A 1	WATER PUMP BASE ASSEMBL	1		
16	26	31489	OIL SEAL, WATER PUMP BAS	1		
17	17	29596	DOWEL PIN, WATER PUMP E	2		
18	27	32433	GASKET, LOWER - WATER PUI	1		
19		32435	PLATE, FACE - WATER PUMP E	1		
20	27	32434	GASKET, UPPER - FACE PLATE	1		
21	46	32437A 1	WATER PUMP BODY ASSEMBL	1		
22		30915	INSERT, WATER PUMP BOD	1		
23	26	31507	OIL SEAL, WATER PUMP BOD	1		
24	47	30221	IMPELLER, WATER PUMP	1		
25	17	29967	PIN, IMPELLER DRIVE	1		
26	10	30720	SCREW, WATER PUMP BODY	1		
27	13	26992	LOCKWASHER, WATER PUMP	3		
28	11	29598	NUT, WATER PUMP BODY FAS	2		
29	13	26993	LOCKWASHER, WATER PUMP	1		
30	11	28770	NUT, WATER PUMP BODY FAS	1		
31	25	30271	RING, RUBBER - CENTRIFUGAI	1		
32	26	29677	SEAL, RUBBER - WATER PUMF	1		
33	23	29804	SLEEVE, GUIDE - WATER INLE	1		
34	25	30613	"O" RING, UPPER - DRIVE SHA	1		
35		25136	SHAFT, SHIFT - LOWER	1		
36	18	20233	CLIP, RETAINING - SHIFT SHAF	1		
37	25	25439	"O" RING, SHIFT SHAFT BUSHI	1		
38	23	30617A 1	BUSHING ASSEMBLY, SHIFT SI	1		
39	26	31249	OIL SEAL, SHIFT SHAFT BUSI	1		
40	12	21265	WASHER, RUBBER - SHIFT SH	1		