



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		32275	WIRING HARNESS, INTERNAL	1		
1		32667	WIRING HARNESS, INTERNAL	.1		
2		30050	TERMINAL, HARNESS AND MOTOR	AR,AR		
3		26079	PLATE, WIRING HARNESS TO MOTOR	1,1		
4	10	26128	SCREW, HARNESS PLATE FASTENING	4,4		
5	24	28975	SPRING, GARTER - INTERNAL WIRING	1,1		
6	54	22783	"S" CLIP, RECTIFIER HARNESS LEADS	2,2		
7		29691	RECTIFIER ASSEMBLY	1		
8	13	26993	LOCKWASHER, RECTIFIER MOUNTING	1		
9	11	21929	NUT, RECTIFIER MOUNTING SCREW	1		
10	12	20084	WASHER, RECTIFIER MOUNTING SCREW	1		
11	32	28052	SLEEVE, RUBBER - RECTIFIER HARNESS	3		
12	10	29852	SCREW, HARNESS AND STATOR LEAD	3		
13	11	29488	NUT, HARNESS AND STATOR LEAD	3		
7A		32177A 1	RECTIFIER ASSEMBLY	.1		
8A	10	26065	SCREW, RECTIFIER TO MOUNTING	.1		
9A	11	29250	NUT, RECTIFIER MOUNTING SCREW	.1		
10A	10	29852	SCREW, HARNESS TERMINAL LEAD	.1		
11A	13	26996	LOCKWASHER, RECTIFIER STATOR	.2		
12A	11	20645	NUT, FASTENING - RECTIFIER STATOR	.2		
14	50	31976	STARTER MOTOR ASSEMBLY (D)	1,1		
15		32084	PLATE, SPACER - STARTER MOTOR	1,1		
16	10	22698	SCREW, STARTER MOTOR TO COVER	2,2		
17	13	26993	LOCKWASHER, STARTER MOTOR	2,2		
18		29930	BRACKET, SUPPORT - STARTER MOTOR	1,1		
19	13	24669	LOCKWASHER, THRU BOLT	2,2		
20	11	20890	NUT, THRU BOLT - BRACKET TO MOTOR	2,2		
21		32107	CABLE, WIRE - STARTER MOTOR	1,1		
22	54	20534	CLAMP, CABLE - STARTER MOTOR	1		
23	10	29197	SCREW, HARNESS GROUND LEAD	1,1		
24		32082	SOLENOID, STARTER	1,1	NOTE: SEE BLOCK COMMENTS	
25		32278A 1	GROUND STRAP ASSEMBLY, STARTER	1,1		
26	13	26993	LOCKWASHER, SOLENOID TERMINAL	2,2		
27	11	20083	NUT, SOLENOID TERMINAL (5/16)	2,2		
28	13	26996	LOCKWASHER, SOLENOID TERMINAL	2,2		
29	11	20645	NUT, SOLENOID TERMINAL (#10)	2,2		
30	10	29282	SCREW, SOLENOID TO STARTER MOTOR	2,2		
31	54	22740	CLIP, LEAD WIRES TO SUPPORT	1,1		
32		22789	"D" WASHER, CLIP FASTENING	1,1		
33	10	30009	SCREW, LEAD WIRE CLIP FASTENING	1,1		
34	54	22627	CLAMP, WIRING HARNESS TO STARTER	1,1		