



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2115	2458	COWL, BOTTOM	1		
2		37415A	1 TRIM MOULDING ASSEMBLY, BC	1		
3		38046	SPLICER, TRIM MOULDING - RI	1		
4	10	29226	SCREW, DECORATIVE - MOULI	5		
5	12	24671	SCREW, DECORATIVE - MOULI	2		
6	11	29225	NUT, NYLON CAP - MOULDING	2		
7	13	26995	LOCKWASHER, MOULDING FA	3		
8	11	26419	NUT, BRASS - MOULDING FAS	3		
9		37920A	1 COVER PLATE ASSEMBLY, BOTT	1		
10		37940	PAD, SOUND - COVER PLATE	1		
11	10	30009	SCREW, COVER PLATE TO BOTT	4		
12		37638	BOOT, CONTROL CABLES - BOT	1		
13		23760	BAGGLE, BOTTOM COWL	1		
14	10	21106	SCREW, BAFFLE TO BOTTOM CC	3		
15		37637	BOOT, FUEL CONNECTOR - BO	1		
16		37445	SUPPORT, WIRING HARNESS - E	1		
17	10	37561	SCREW, WIRING HARNESS SUP	2		
18	11	20184	NUT, WIRING HARNESS SUPPO	2		
19	32	26407	HOSE, TELL TALE - EXHAUST CC	1		
20	22	29111	CONNECTOR, TELL TALE HOSE	1		
21	22	25885	ELBOW, TELL TALE HOSE TO EX	1		
22	54	22976	CLAMP, TELL TALE HOSE TO CO	2		
23	27	37437	GASKET, POWERHEAD TO EXHA	1		
24		38468A	4 PLATE ASSEMBLY, EXHAUST EX	1		
25	12	36446	WASHER, NYLON - WATER INL	1		
26	26	36557	SEAL, RUBBER - WATER INLET	1		
27		38448	RETAINER, WATER TUBE SEA	1	SERIAL 01809704-09999999	
28	10	34439	SCREW, RETAINER TO EXHAU	1	SERIAL 01809704-09999999	
29	10	22421	SCREW, EXHAUST EXTENSION	1	SERIAL 01809704-09999999	
30	11	20184	NUT, EXHAUST EXTENSION PL	1	SERIAL 01809704-09999999	
31	27	38471	GASKET, EXHAUST EXTENSION	1		
32		37918	SEAL, EXHAUST EXTENSION PL	1		
33		38032	STRIP, RETAINING - EXHAUST E	1		
34	10	37571	SCREW, SEAL AND RETAINING	5		
35		37824	BRACKET, SHIFT SHAFT HOLD C	1		
36	10	30009	SCREW, HOLD DOWN BRACKET	1		
37		37430A	1 SHIFT SHAFT ASSEMBLY, UPPE	1		
38		37899	LINK ROD, SHIFT	1		
39	13	29720	WASHER, WAVE - LINK ROD	2		
40	18	25191	COTTER PIN, LINK ROD TO SHIF	1		
41		37897	BRACKET, ANCHOR - CONTROL	1		