



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	22339	NUT, FLYWHEEL	1		
2	12	33001	WASHER, FLYWHEEL NUT	1		
3	28	30250	KEY, FLYWHEEL DRIVE	1		
4	225	2494A 2	FLYWHEEL ASSEMBLY, COMPLE	1		
5	10	32156	SCREW, FLEXIBLE PLATE TO F	8		
6	10	32417	SCREW, PLATE AND HUB TO F	8		
7	17	26618	PIN, DOWEL- PULLEY TO FLYW	1		
8		29788	FLANGE FLYWHEEL PULLEY	1		
9		30306	PULLEY, FLYWHEEL	1		
10		29787	HUB, FLYWHEEL PULLEY	1		
11	398	2188	STATOR, ALTERNATOR	1		
12		30050	TERMINAL, STATOR LEAD WIF	2		
13	10	32614	SCREW, STATOR TO UPPER EN	4		
14	54	22740	CLIP, STATOR LEAD FASTENING	2		
14	54	22875	CLIP, STATOR LEAD FASTENING	2		
15	10	30009	SCREW, STATOR LEAD CLIP FA	2		
15	10	26548	SCREW, STATOR LEAD CLIP FA	2		
16		22789	"D" WASHER, CLIP FASTENING	4		

