



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		37817	WIRING HARNESS, INTERNAL	1	
2		30050	TERMINAL, HARNESS AND ME	AR	
3		26079	PLATE, WIRING HARNESS TO B	1	
4	10	26128	SCREW, HARNESS PLATE FASTI	4	
5	24	28975	SPRING, GARTER-INTERNAL W	1	
6	54	22783	"S" CLIP, RECTIFIER HARNESS L	1	
7		32177A	RECTIFIER ASSEMBLY	1	
8	10	26065	SCREW, RECTIFIER TO MOUNTI	1	
9	11	29250	NUT, RECTIFIER MOUNTING SCF	1	
10	10	29852	SCREW, HARNESS TERMINAL LI	1	
11	13	26396	LOCKWASHER, RECTIFIER STAT	2	
12	11	20645	NUT, FASTENER - RECTIFIER S	2	
13	50	37274A	STARTER MOTOR ASSEMBLY	1	
14		37332	PLATE, SPACER-STARTER MOT	1	
15	10	22698	SCREW, STARTER MOTOR TO C	2	
16	13	26393	LOCKWASHER, STARTER MOTO	2	
17		38747	BRACKET, SUPPORT - STARTER	1	
18	13	24669	LOCKWASHER, THRU BOLT	2	
19	11	20890	NUT, THRU BOLT - BRACKET TO	2	
20		32107	CABLE, WIRE - STARTER MOTO	1	
21	10	29197	SCREW, HARNESS GROUND LE	1	
22		32082	SOLENOID, STARTER	1	
23		32278A	GROUND STRAP ASSEMBLY, ST	1	
24	13	26993	NUT, SOLENOID TERMINAL (5/1)	2	
26	13	26996	LOCKWASHER, SOLENOID TERN	2	
27	11	20645	NUT, SOLENOID TERMINAL (10)	2	
28	10	29282	SCREW, SOLENOID TO STARTEI	2	
29	54	24836	CLIP, LEAD WIRES TO SUPPORT	1	
30	10	26548	SCREW, LEAD WIRE CLIP FASTE	1	
31		22789	"D" WASHER, CLIP FSTENING SI	1	
32	54	24871	CLAMP, WIRING HARNESS TO S	1	
33	10	26548	SCREW, HARNESS CLAMP FAST	1	
34		22789	"D" WASHER, HARNESS CLAMP	1	
35		29714	BLOCK, TERMINAL - UPPER FUE	1	
36	10	22245	SCREW, TERMINAL BLOCK FSTE	2	
37	13	26996	LOCKWASHER, TERMINAL BLOC	2	
38	12	26014	WASHER, TERMINAL BLOCK FAS	2	
39		32227	BALLAST, IGNITION COIL	2	
40	10	28666	SCREW, BALLAST AND PORT CC	1	
41	13	26992	LOCKWASHER, BALLAST AND RI	1	