



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2114	3806	COWL, TOP	1		
2		52733A	2 RETAINER ASSEMBLY, TOP COV	1		
3		35496	PAD, BUMPER - TOP COWL RE	1		
4	10	37558	SCREW, RETAINER TO TOP COV	1		
5	13	39107	LOCKWASHER, RETAINER TO TI	1		
6		49448	SHIELD, TOP COWL - REAR	1		
7	10	37370	SCREW, SHIELD TO TOP COV	3		
8	13	37371	LOCKWASHER, SHIELD SCREW	3		
9		47341A	1 ROPE, STARTER (FOR MANUAL	1		
10		52739	HINGE, COWL LATCH - TOP COW	1		
11		52737	LEVER, COWL LATCH HINGE	1		
12	17	33522	PIN, ROLL - COWL LATCH LEVE	1		
13	24	53019	SPRING, COWL LATCH HINGE	1		
14		52738	HOOK, TOP COWL LATCH - REAF	1		
15	10	22956	SCREW, REAR HOOK TO TOP CC	2		
16	13	26992	LOCKWASHER, REAR HOOK MO	2		
17		48825	FRAME, TOP COWL SUPPORT	1		
18		37639	MOUNT, RUBBER-TOP COWL FR	1		
18		46096	MOUNT, RUBBER - TOP COWL F	2		
19	11	20361	NUT, RUBBER MOUNT TO TOP C	2		
19	11	21528	NUT, RUBBER MOUNT TO TOP C	4		
20		54685	BRACKET, TOP COWL SUPPORT	1		
21		31014	MOUNT, RUBBER - REAR SUPPC	2		
22	13	26992	LOCKWASHER, RUBBER MOUNT	2		
23	12	20346	WASHER, RUBBER MOUNT TO F	2		
24	11	20088	NUT, RUBBER MOUNT TO REAR	2		
25	10	26065	SCREW, REAR BRACKET TO TOI	4		
26	11	46793	NUT, REAR BRACKET SCREW	4		
27	10	24234	SCREW, REAR BRACKET TO BOT	4		
28	13	26993	LOCKWASHER, REAR SUPPORT	4		
29		52725A	2 BRACKET ASSEMBLY, TOP COW	1		
30	10	22040	SCREW, FRONT BRACKET TO BI	2		
31	11	46793	NUT, FRONT SUPPORT BRACKE	2		
32	10	20362	SCREW, FRONT BRACKET TO TI	2		
33	13	26993	LOCKWASHER, FRONT SUPPOR	2		
34		37640	MOUNT, RUBBER - FRONT SUPP	1		
35	13	26993	LOCKWASHER, RUBBER MOUNT	1		
36	11	22053	NUT, RUBBER MOUNT TO FRON	1		