



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2115	3617	COWL, BOTTOM (MERC 1000BP)	1		
1	2115	3167	COWL, BOTTOM (MERC 1250BP)	1		
2		52862A 2	DRIP TRAY ASSEMBLY, BOTTOM	1		
3		37940	PAD, SOUND - DRIP TRAY	1		
4	10	34222	SCREW, DRIP TRAY TO BOTTOM	4		
5	32	52032	HOSE, DRIP TRAY TO BOTTOM	1		
6		37638	BOOT, CONTROL CABLES - BOT	1		
7		48231	SPACER, BOTTOM COWL (COWL	1		
8	10	48591	SCREW, SPACER TO BOTTOM C	2		
9		37637	BOOT, FUEL CONNECTOR - BOT	1		
10		23760	BAFFLE, BOTTOM COWL	1		
11	10	52867	SCREW, BAFFLE TO BOTTOM CC	3		
12		37445	SUPPORT, WIRING HARNESS - E	1		
13	10	37990	SCREW, WIRING HARNESS SUP	1		
14	11	46887	NUT, WIRING HARNESS SUPPO	1		
15	32	34395A 1	HOSE, TELL TALE - EXHAUST CC	1		
16		52889	NOZZLE, TELL TALE HOSE TO B	1		
17	10	34222	SCREW, TELL TALE NOZZLE TO	1		
18	22	25885	ELBOW, TELL TALE HOSE TO EX	1		
19	54	48123	CLAMP, TELL TALE HOSE TO CO	2		
20	27	28713	GASKET, POWERHEAD TO DRIV	1		
21	26	38970	SEAL, RUBBER - WATER INLET	1		
22		38448	RETAINER, WATER TUBE SEAL	1		
23	10	34439	SCREW, RETAINER TO DRIVE SI	1		
24		37918	SEAL, COWL - FRONT	1		
25		38032	STRIP, RETAINING - COWL SEAL	1		
26	10	37571	SCREW, SEAL AND RETAINING	5		
27		48943A 2	SHIFT SHAFT ASSEMBLY, UPPE	1		
27		53777A 2	SHIFT SHAFT ASSEMBLY, UPPE	1		
28		48047A 2	LINK ROD ASSEMBLY	1		
29	12	24664	WASHER, LINK ROD	1		
30	13	29720	WASHER, WAVE - LINK ROD	2		
31		47869A 1	BRACKET ASSEMBLY, ANCHOR	1		
32		38802	CAP, BRASS BARREL TO THRC	1		
32		49935	CAP, BRASS BARREL TO THRC	1		
33	10	24234	SCREW, ANCHOR BRACKET TO	3		
34	24	20099	SPRING, LINK ROD TO GUIDE BL	1		
35		37896	GUIDE BLOCK, LINK ROD	1		
36		52100	WEAR PLATE, LINK ROD	1		
37		38279	LATCH, CONTROL CABLE FASTE	1		
38	12	21621	WASHER, FLAIN, LINK ROD	1		