



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	393	3736A 3	HOUSING ASSEMBLY, DISTRIBUTOR	1		
2		32197	STOP, SPARK ADVANCE - DISTRIBUTOR	1		
3	17	27962	PIN, ANCHOR SPRING - DISTRIBUTOR	1		
4	24	27944	SPRING, HORSESHOE - DISTRIBUTOR	1		
5	12	53540	WASHER, ECONOMIZER COLLAR	1		
6		30580A 1	ECONOMIZER COLLAR ASSEMBLY	1		
7	17	27961	PIN, ECONOMIZER COLLAR - SPRING	1		
8	22	25094	FITTING, GREASE - ECONOMIZER	1		
9		27947	SWIVEL, LINKAGE - ECONOMIZER	1		
10		25996A 1	SWIVEL AND LINK ROD ASSEMBLY	1		
11	11	25168	NUT, UPPER LINK ROD ADJUSTER	1		
12		37588	ROD, LINK - UPPER	1		
13		27948	SWIVEL, UPPER LINK ROD TO THROTTLE	1		
14		48856	LEVER, THROTTLE CONTROL	1		
15	13	25806	WASHER, WAVE - THROTTLE CONTROL	1		
16	12	29245	WASHER THROTTLE CONTROL	1		
17	11	20361	NUT, UPPER LINK ROD TO THROTTLE	1		
18	10	37559	SCREW, THROTTLE LEVER TO ENGINE	1		
19	12	29395	WASHER, THROTTLE CONTROL	1		
20	23	45818	BUSHING, THROTTLE CONTROL	1		
21	11	20509	NUT, THROTTLE CONTROL LEVER	1		
22		37587	SWIVEL, LOWER - THROTTLE CONTROL	1		
23	11	20361	NUT, THROTTLE CABLE TO LOWER	1		
24		48692	COLLAR, THROTTLE ACTUATOR	1		
25	10	48675	SCREW, ADJUSTING - THROTTLE	1		
26	11	20890	NUT, THROTTLE ACTUATOR COLLAR	1		
27		52023	CAP, NYLON - THROTTLE ACTUATOR	1		
28		48671	PLATE, THROTTLE ACTUATOR	1		
29	10	37892	SCREW, THROTTLE ACTUATOR	2		
30	12	20128	WASHER, THROTTLE ACTUATOR	2		
31	13	26396	LOCKWASHER, THROTTLE ACTUATOR	2		
32	23	48674	SPACER, THROTTLE ACTUATOR	2		
33		54239	CAM, THROTTLE ACTUATOR PLATE	1		
34	12	46246	WASHER, ADAPTOR - DISTRIBUTOR	1		
35		48666A 1	ADAPTOR ASSEMBLY, DISTRIBUTOR	1		
36	22	25094	FITTING, GREASE - DISTRIBUTOR	1		
37	10	22040	SCREW, DISTRIBUTOR HOUSING	3		
38	12	20084	WASHER, DISTRIBUTOR HOUSING	3		
39	11	20083	NUT, DISTRIBUTOR HOUSING SPRING	3		
40		30585	BRACKET, STOP	1		
41	16	20955	STUD, DISTRIBUTOR ADAPTOR	2		