



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	30	20066	BALL BEARING, DISTRIBUTOR H	1		
2	11	54209	NUT, ROTOR SHAFT TO DISTR	1		
3	23	53539	SLEEVE, ROTOR SHAFT	1		
4	393	3736A 3	HOUSING ASSEMBLY, DISTRIBU	1		
5		53417	GROUND STRAP ASSEMBLY, DI	1		
6	10	30663	SCREW, GROUND STRAP ATTAC	1		
7	22	55262	ELBOW, VENT - DISTRIBUTOR H	1		
8	30	26379	BALL BEARING, DISTRIBUTOR H	1		
9	23	53538	SPACER, ROTOR SHAFT	1		
10	53	26406	RING, RETAINING - HALL BEARI	1		
11	393	3893	DISC, ROTOR	1		
12	393	3738	ROTOR, DISTRIBUTOR	1		
13	54	55651	CLAMP, DISTRIBUTOR CAP TO C	1		
14	10	55943	SCREW, DISTRIBUTOR CAP CLA	1		
15	11	26768	NUT, DISTRIBUTOR CAP CLAMP	1		
16	32	34395A 1	HOSE, VENT - DISTRIBUTOR TO	1		
16	32	34395A 1	HOSE, VENT - DISTRIBUTOR TO	1		
17	22	31521	ELBOW, VENT HOSE TO BOTTOI	2		
18	393	3836A 1	HIGH TENSION CABLE ASSEMBL	1		
19	25	26547	GROMMET, HIGH TENSION CA	1		
20	332	2854	BOOT, HIGH TENSION CABLE	1		
21	393	1275	SLEEVE, HIGH TENSION CABLE	1		
22	393	3751A 2	DISTRIBUTOR CAP ASSEMBLY	1	A-27-55896 GASKET, DISTRIBU	
--	393	1293A 1	BRUSH AND SPRING ASSEMBL	1		
23	22	31521	ELBOW, VENT - DISTRIBUTOR	1		
24	33	45191	SPARK PLUG (CHAMPION - L19V	6		
25		47899A 9	SPARK PLUG LEAD ASSEMBLY #	6		
--		20121	CONNECTOR, SPARK PLUG LE	6		
26		47604A 1	PROTECTOR, SPARK PLUG LEA	6		
27	393	1275	SLEEVE, SPARK PLUG LEAD TO	6		
28	25	26547	GROMMET, SPARK PLUG LEADS	12		
29		45409	WIRE RETAINER, HIGH TENSIO	2		
30		45392	BRACKET, FRONT - WIRE RETAI	1		
31		47398	BRACKET, REAR - WIRE RETAIN	1		
32	10	30663	SCREW, FRONT AND REAR BRA	4		
33		45391	SPACER, RUBBER - HIGH TENSII	2		
34	332	2983A 5	IGNITION COIL ASSEMBLY, COMI	1		
35	10	22486	SCREW, COIL MOUNTING BRAC	1		
36	13	26992	LOCKWASHER, COIL MOUNTING	1		
37	10	37561	SCREW, COIL MOUNTING BRAC	2		
38	11	46987	NUT, COIL MOUNTING BRACKET	2		